




Triple 3.5Qt Stainless Steel Condiment Dispenser User Manual


▼ Package Contents

Please check all parts before assembling.
Replacement parts are available for purchase.

Dispenser Pump Assembly

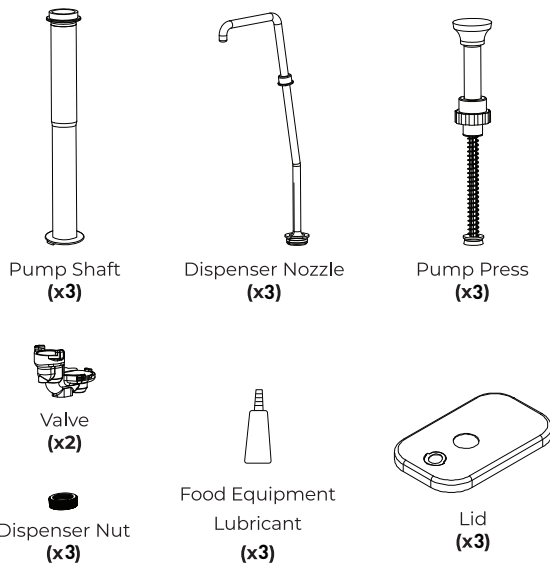


Plastic Jar

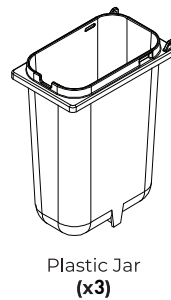

Stainless Steel Casing



Pump Cleaning Tools

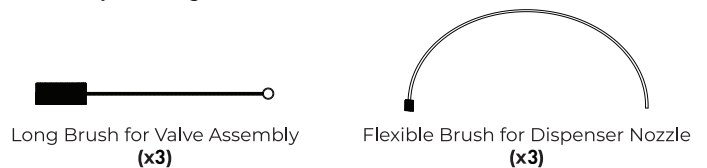


▼ Assembly Instructions

❗ All components **MUST** be cleaned and sanitized before the first use.


1 - Valve Assembly

- Align the bottom of the Pump Shaft with the Valve.
- Ensure that the tabs on the bottom of the Pump Shaft are positioned with the two notches on the larger Valve opening.
- Press down the Pump Shaft, and twist it until the tabs are secured under the lips of the opening.

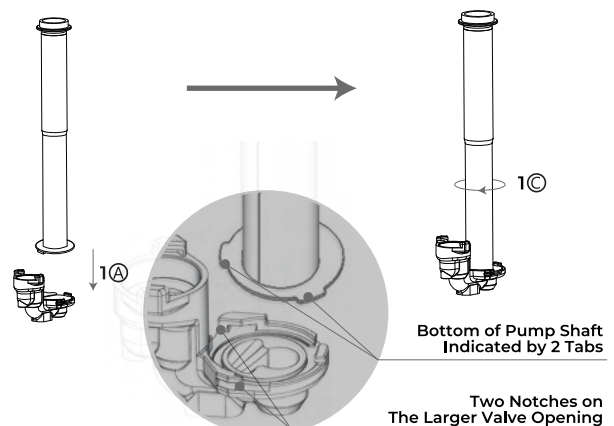


1 - Valve Assembly - Continued

- ① Align the bottom of the Dispenser Nozzle with the Valve.
- ② Ensure that the flat edge on the bottom of the Nozzle aligns with the lip of the remaining Valve opening.
- ③ Press the bottom of the Nozzle into the opening and secure it by twisting it until the edge corner is under the lip of the opening.

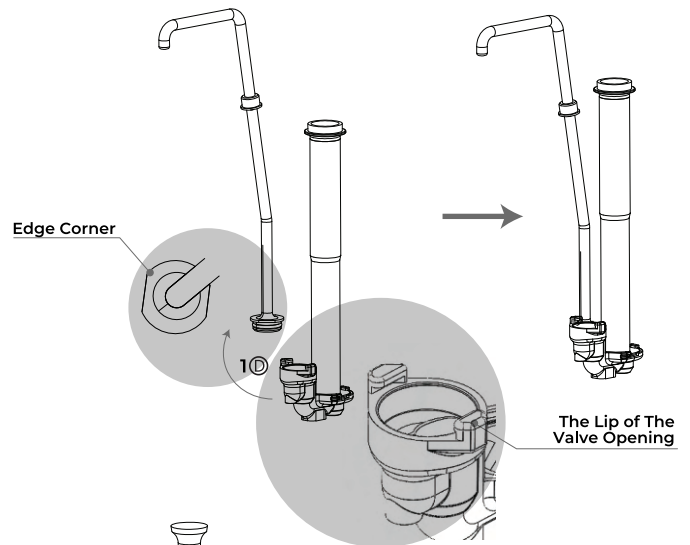


2 - Dispenser Pump Assembly

- ① Insert the Lid from the bottom side through Hole A onto the Nozzle, then make sure Hole B is aligned with the top of Pump Shaft.
- ② Insert the Dispenser Nut onto the Nozzle head and screw it securely.
- ③ Insert the Pump Press into the Valve Assembly and screw it securely.

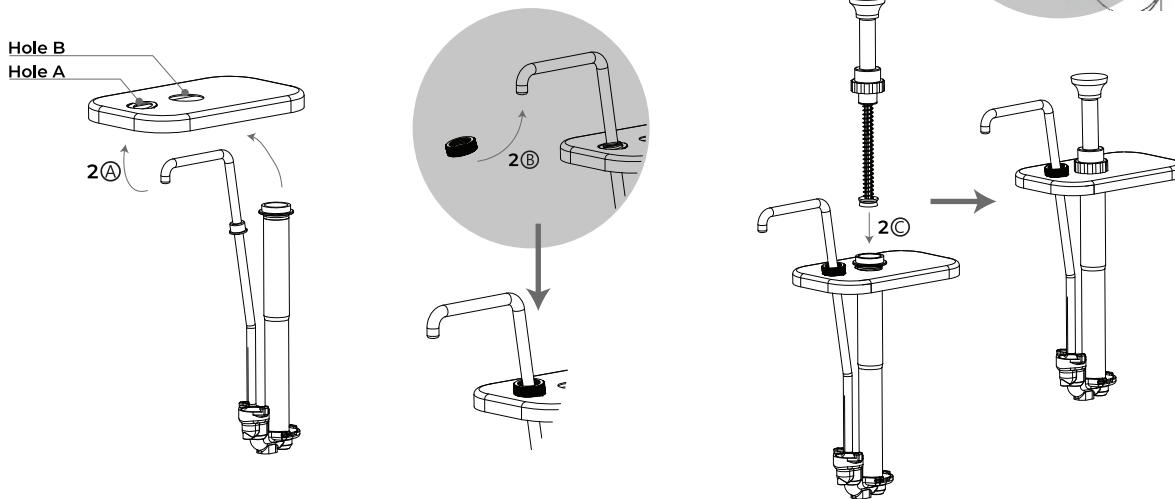

3 - Condiment Dispenser Assembly

- ① Gather 3 Plastic Jars and the Stainless Steel Casing.
- ② Place both Plastic Jars into the Casing, facing the same direction.
- ③ Place the entire Dispenser Pump Assembly into the Plastic Jar, and make sure the nozzle head aligns with the opening on the Plastic Jar. Repeat for the second Plastic Jar.
- ④ Before use, position the assembled dispenser on a flat and even surface and ensure that all components are securely installed.

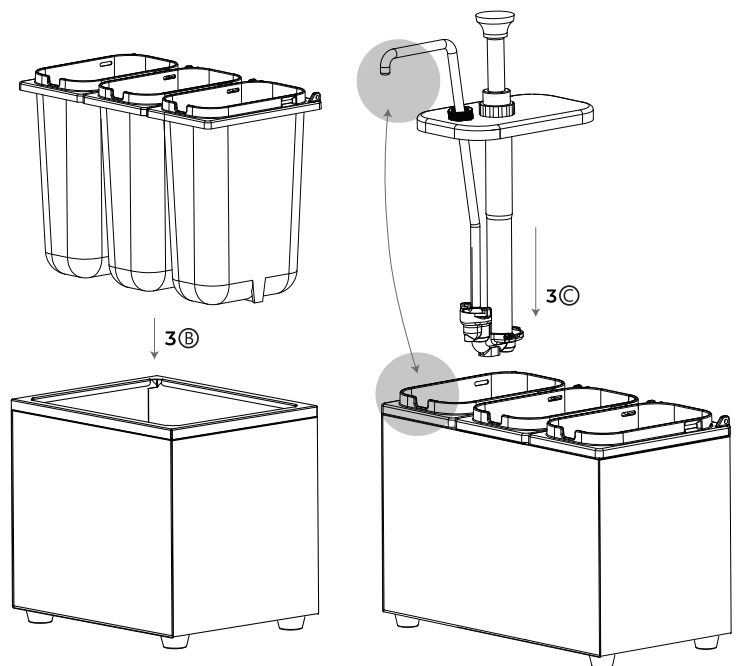

Maintenance Tips

- ▶ Regularly disassembling and cleaning each part is essential for proper and extended usage.
- ▶ To clean a Dispenser Pump Assembly that has been in use, first immerse the entire Valve in hot water. Then pump hot water through the Assembly multiple times until only clear water flows out.
- ▶ Disassemble the Pump, then use the included Flexible Brush and Long Brush to thoroughly clean and scrub the Dispenser Nozzle and Pump Shaft with hot soapy water.
- ▶ Before reassemble the Pump for use again, ensure all parts are thoroughly dried and sanitized.