



TRANSLATION OF ORIGINAL ORIGINAL OPERATING AND INSTRUCTION MANUAL ELECTRONIC OVEN WITH TOUCH SCREEN

MKF 464 TS - MKF 4642 TS - MKF 416 TS - MKF 511 TS - MKF 611 CTS –
MKF 611 VCTS – MKF 623 CTS - MKF 664 TS – MKF 616 TS MKF 621 TS –
MKF 711 TS – MKF 711 VTS - MKF 1011 CTS - MKF 1011 VCTS - MKF 1064 TS –
MKF 1016 TS – MKF 1021 TS - MKF 1111 TS – MKF 1111 VTS
MKF 1664 TS – MKF 2011 TS



Tecnoeka srl

via Marco Polo, 11
35010 Borgoricco
Padova - Italy

tel. +39.049.5791479
tel. +39.049.9300344

info@tecnoeka.com
tecnoekasrl@pec.it
tecnoeka.com

cod. fisc. - p.iva 00747580280
rea n. 133205
reg. a.e.e. n. IT08020000001275
cap. soc. euro 119.000,00 I.V.



EU DECLARATION OF CONFORMITY

Annex II A, of Directive 2006/42/EC

Manufacturer's name	TECNOEKA Srl
Manufacturer's address	Via Marco Polo, 11 - 35010 Borgoricco (PD)
Name of the person in charge of the technical file	Ing. Da Re Gianpaolo
Address of the person in charge of the technical file	Via Marco Polo, 11 - 35010 Borgoricco (PD)
Product type	Electronic oven
Purpose of the product	Cooking food
Model	MKF 464 TS – MKF 4642 TS - MKF 416 TS - MKF 511 TS - MKF 611 CTS –MKF 611 VCTS – MKF 623 CTS - MKF 664 TS – MKF 616 TS – MKF 621 TS – MKF 711 TS – MKF 711 VTS - MKF 1011 CTS –MKF 1011 VCTS - MKF 1064 TS – MKF 1016 TS –MKF 1021 TS - MKF 1111 TS – MKF 1111 VTS - MKF 1664 TS – MKF 2011 TS
s/n	

TECNOEKA Srl declares that the above mentioned products comply with all provisions pertaining to the following directives:

Machinery directive 2006/42/EC;

Electromagnetic compatibility 2014/30/EU

TECNOEKA Srl declares that the above mentioned products comply with the following harmonised directives:

EN 60335-1 ; EN 60335-2-42

EN 55014-1 ; EN 55014-2 ; EN 61000-3-2 ; EN 61000-3-3 ;

EN 62233

TECNOEKA Srl declares that the above mentioned products also comply with the following directives:

General product safety directive 2023/988/EU;

Directive restricting the use of hazardous substances in electrical and electronic equipment 2011/65/EU;

Directive on waste of electrical and electronic equipment 2012/19/EU.

TECNOEKA Srl declares that the above mentioned products comply with Regulation (EC) 1907/2006.

TECNOEKA Srl declares that the above mentioned products comply with Regulation (EC) 1935/2004.

Borgoricco, 01/01/2025.


Board Representative Signature (Lora Cristina)

UKCA DECLARATION OF CONFORMITY

Manufacturer's name	TECNOEKA Srl
Manufacturer's address	Via Marco Polo, 11 - 35010 Borgoricco (PD)
Name of the person in charge of the technical file	Ing. Da Re Gianpaolo
Address of the person in charge of the technical file	Via Marco Polo, 11 - 35010 Borgoricco (PD)
Product type	Electric oven
Purpose of the product	Cooking food
Model	MKF 464 TS – MKF 4642 TS - MKF 416 TS - MKF 511 TS - MKF 611 CTS –MKF 611 VCTS – MKF 623 CTS - MKF 664 TS – MKF 616 TS – MKF 621 TS – MKF 711 TS – MKF 711 VTS - MKF 1011 CTS –MKF 1011 VCTS - MKF 1064 TS – MKF 1016 TS –MKF 1021 TS - MKF 1111 TS – MKF 1111 VTS - MKF 1664 TS – MKF 2011 TS
s/n	
TECNOEKA Srl declares that the above mentioned products comply with all provisions pertaining to the following directives: Supply of Machinery (Safety) Regulations 2008; Electromagnetic Compatibility Regulations 2016	
TECNOEKA Srl declares that the above mentioned products comply with the following harmonised directives: BS EN 60335-1; BS EN 60335-2-42 BS EN 55014-1; BS EN 55014-2, BS EN 61000-3-2; BS EN 61000-3-3 BS EN 62233	
TECNOEKA Srl declares that the above-mentioned products also comply with the following directives: General Product Safety Regulations 2005; Direttiva di restrizione nell'uso di sostanze pericolose nelle apparecchiature elettriche ed elettroniche RoHS Regulations 2011; Waste Electrical and Electronic Equipment Regulations 2013.	
TECNOEKA Srl declares that the above mentioned products comply with Regulation UK REACH	
Borgoricco, 01/01/2025.  Firma Rappresentante CDA (Lora Cristina)	

CONTENTS

1. Technical service	8
2. Instructions for the user	8
2.1 Control panel	8
2.2 Touch Screen control operation	9
2.3 Switching on	9
2.3 Explanations of the symbols:	12
2.4 "HOME" screen	13
2.5 Operating parameters	14
2.6 Additional functions:	15
2.7 "Simplified" mode function (allows a single cooking step)	16
2.8 "Advanced" mode function (allows 10 cooking steps)	17
2.9 Cooking cycle with core probe "Advanced" mode	19
2.10 Cooking cycle with core probe and ΔT temperature "Advanced" mode	20
2.11 Cooking cycle with "Pre-heating" function	21
2.12 Cooking cycle with "Maintenance" function	21
2.13 Cooking cycle with "Postpone" function	21
2.14 Program storage (recipe)	22
2.15 Program storage (recipe) with picture	22
2.16 Recipe book	22
2.17 How to delete cooking programs from the "CHEF" library	24
2.18 Import / export from "USB" to "Chef Recipes"	25
2.18.1 Export all recipes (stored programs)	25
2.18.2 Import all recipes (stored programs)	25
2.18.3 Export some recipes (stored programs)	26
2.18.4 Import some recipes (stored programs)	26
2.19 "Multi-level" function	27
2.20 Accessories	27
2.21 Cooling	28
2.22 Settings	30
2.23 "HACCP" function	31
2.23.1 Activating/deactivating the "HACCP" function	31
2.23.2 Downloading "HACCP" data on a USB flash drive	31
2.24 Wi-Fi network connection	32
2.24.1 Software update availability (oprative function update)	33
2.25 Technical Service	33
2.26 Wheeled models (mod. MKF 1611 TS - MKF 1664 TS - MKF 2011 TS)	33
3. Cleaning	34
3.1 Manual cooking chamber cleaning	34
3.2 Semi-automatic cooking chamber cleaning	35
3.3 Automatic cooking chamber cleaning	35
3.4 Extraordinary steam generator cleaning (descaling)	36
3.5 Cleaning fans	36
3.6 Door gasket cleaning	36
3.7 Door cleaning	37
3.8 Cleaning the external casing	37
3.9 Inactivity period	37
4 Troubleshooting	38
5 Possible alarms	39
6 Possible errors	1
7. Technical support	2
8. Disposal of the appliance	2
9. Conventional warranty	3
10. Availability and supply of spare parts	3
11. Applicable law and competent Court	3

GENERAL INFORMATION

It is essential for this instruction manual to be stored together with the appliance for future referencing; in the event of misplacing it, a copy must be obtained directly from the manufacturer. This information has been prepared for your safety and that of others.

Therefore, we kindly ask you to read it carefully before installing and using the appliance.

If upon reception of the goods the packaging should not be intact or should it be damaged, affix the following wording: "GOODS SUBJECT TO CHECK", with the specification of the damage and countersigned by the driver; file a written complaint with the vendor within 4 calendar days (not business days) from the date of delivery, after which no complaints shall be accepted.

For periodic maintenance checks and repairs, contact your nearest Technical Support Centre and only use original spare parts. Failure to comply with this provision shall forfeit the warranty right

The "technical data" plate is located on the side panel of the appliance.

The inappropriate or incorrect use of the appliance shall invalidate any liability and warranty right by the Manufacturer.



BURN and INJURY HAZARD

- The temperature of the appliance's external surfaces may exceed 60°C, only touch control elements. Burn hazard!
- Pay attention to handling food containers during and after cooking: they might be very hot. Wear appropriate protective thermal clothing to prevent burns.
- During operation, with the door open, do not remove the fan cover; do not touch the moving fans and resistors which are still hot.
- **The maximum working height, referred to the highest surface level, must be 160 centimetres from the floor.**



After installing the appliance apply the suitable adhesive symbol (supplied) at a height of 160 centimetres.

- To prevent boiling, do not use containers filled with liquids or food that liquefy with heat, in excessive amounts that cannot be easily kept under control. For this reason, only use trays that let you see inside the container. When extracting a tray containing hot liquid pay attention not to spill any liquid.
- Before removing the food from the oven after cooking with the needle shaped thermal probe (core probe), carefully extract the still hot probe from the food, taking care not to leave it hanging outside the cooking chamber.
- Do not open the door during washing operations, as chemical substances (corrosive) used for cleaning and hot fumes might escape.
- After baking open the door with caution, to avoid the violent outflow of heat which might cause burns.



ELECTRIC SHOCK HAZARD

- Before performing any cleaning on the appliance, disconnect the power supply (act on the safety magnetic circuit breaker) and water supply (close the water cock). Let it cool completely.
- Any modification to the electrical system that might be required to be able to install the appliance must be carried out by competent personnel only.
- The power supply system must be fitted with effective earthing connection according to the regulations in force.

- In the permanent connection to the mains, a protective pole switch must be provided between the appliance and the mains with minimum opening between the contacts of overvoltage category III (4000V), sized for the load and complying with applicable regulations (automatic circuit breaker).
- If the power supply cable is damaged, it must be replaced by the manufacturer or their technical support service, or in any case by a person with similar qualifications, to prevent any risk.
- The appliance also has electrical components inside, for safety reasons it is forbidden to wash it with water or steam jets especially if aimed at the aeration vents on the metal surfaces of its outer casing.



FIRE HAZARD

- No foods containing easily flammable substances must be cooked, such as alcohol-based foods; self-combustion phenomena might occur leading to fires and explosions in the cooking chamber.
- Before using the appliance, make sure that there are no non-compliant objects (e.g. User manuals, plastic bags or other flammable objects) or detergent residues, inside the cooking chamber.
- Always keep the cooking chamber clean. Cooking liquids (fats) or food residues may ignite!

USER SAFETY

- The appliance is intended for professional use in institutional and professional kitchens and must only be used by skilled personnel who have been trained on its proper use. For safety reasons the appliance must be supervised during operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- In the event of failure or poor operation, switch off the appliance, close the water supply cock, disconnect the power supply and contact an authorised Technical Support Centre.
- This appliance shall be used only for the purposes for which it was designed, meaning for all types of baking of pastries, baked goods and food: fresh and frozen; for reconditioning chilled and frozen food, for steam cooking meats, fish and vegetables.
Any other use is considered improper.
- The noise level of the appliance in operation is less than 70 dB (A).

INFORMATION FOR THE USER

- When the appliance is first used it is recommended to operate it unladen for 40/50 minutes at a temperature of 220/230°C. In this way all unpleasant yet fully normal smells due to heating the thermal insulation enveloping the cooking chamber and the silicone used for its external sealing are dissipated.
- Avoid prolonged permanence on the steel surfaces of foods containing acidic substances (lemon juice, vinegar, salt, etc.) which cause corrosive deterioration.
- The appliance must be cleaned at regular intervals, even daily (using automatic washing, if available), to assure best functionality and lengthening its life cycle.
- In the event specific detergents (degreasers) are used for cleaning stainless steel, ensure they do not contain corrosive acid substances (no presence of chlorine even if diluted) or abrasive substances. Carefully follow the instructions and warnings of the detergent's manufacturer and take precautions such as using adequate rubber gloves.
- Strictly avoid using scouring pads, steel wool and scrapers that may ruin the treated surfaces.
- In order not to irreparably damage the needle shaped thermal probe (core probe), avoid using it in high temperature cooking (OVER 230°C); also avoid letting the probe cable come into direct contact with the hot metal surfaces inside the cooking chamber.

COOKING TIPS

- In placing the food in the cooking chamber, maintain a space of at least 40 mm between trays in order not to excessively obstruct air circulation.

- Do not use trays with sides higher than necessary: the sides form barriers that prevent hot air circulation.
- Preheat the oven every time before cooking to achieve top performance.
- For cooking as consistently as possible, spread the food evenly in every tray taking into account its size, layer or thickness.
- Avoid adding salt to food in the cooking chamber.
- To check correct progress of the cooking cycle use the chamber's internal lighting: avoid uselessly opening the door, which causes wastes of energy and longer cooking times.

RESIDUAL RISKS

- After baking open the door with caution, to avoid the violent outflow of heat which might cause burns.
- During oven operation pay attention to hot areas of its outer surfaces (marked on the appliance).
- Do not use the door handle to move the appliance (possible glass breakage).
- The supporting bench must be able to withstand the weight of the machine and house it correctly.
- The appliance is fitted with electrical parts and must never be washed with a water or steam jet.
- The appliance is electrically connected: disconnect the power supply before performing any type of cleaning.
- To avoid incorrect connections of the appliance, the relevant electrical/water connections are marked on the appliance by suitable identification plates.

Only for wheeled models (MKF 1611 TS – MKF 1664 TS – MKF 2011 TS)

- Appropriate heat protection clothing must be worn when acting on the release device to actuate sliding (upwards) of the internal door glass (position to insert the tray trolley), **burn hazard!**
- Appropriate heat protection clothing must be worn when acting on the internal door glass after a cooking cycle to slide it downwards (washing position/cooking chamber pre-heating), **burn hazard!**
- Appropriate heat protection clothing must be worn when extracting the tray trolley from the oven after a cooking cycle, **burn hazard!**
- Ensure the tray trolley can be handled with ease, with no hindrance to insertion and extraction operations: any collision may cause the spillage of hot liquids or food, **burn hazard!**
- Close trays containing liquids so these cannot be spilled when they are hot, **burn hazard!**
- When the tray trolley is inserted in the oven, before closing the door ensure the release device for sliding the internal glass (door) has been activated and the glass is fully up: any impact of the trolley against the glass might break it, **injury hazard!**
- The trolley is fitted with a suitable rod for locking trays. The rod must always be inserted when the trolley is handled during use: trays might fall, **injury hazard!**
- If the tray trolley is not moved, the wheel parking brake must be engaged: the trolley might move on uneven floors, **injury hazard!**
- While loading and unloading the tray trolley, engage the wheel parking brake: the trolley might move, **injury hazard!**
- The tray trolley is mounted on wheels, therefore it might tip over if it is moved on uneven floors, **injury hazard!**
- When inserting or extracting the tray trolley into or from the oven, **pay the utmost attention not to accidentally damage the internal glass gasket** of the door: it is recommended to open the oven door completely while moving the trolley.

1. Technical service

- It is essential for this instruction manual to be stored together with the appliance for future referencing; in the event of misplacing it, a copy must be obtained directly from the manufacturer.
This information has been prepared for your safety and that of others; therefore we kindly ask you to read it carefully before installing and using the appliance.
- For periodic maintenance checks and repairs, contact your nearest Technical Support Centre and only use original spare parts. Failure to comply with this provision shall forfeit the warranty right.
- All installation and commissioning operations must exclusively be performed by technically skilled installers, according to the manufacturer's instructions and in compliance with national standards in force.
- The "technical data" plate is located on the side panel of the appliance.

Note: The inappropriate or incorrect use of the appliance and failure to comply with installation rules shall invalidate any liability by the Manufacturer.

2. Instructions for the user

2.1 Control panel

1- 7" Touch Screen Display

2- Knob with "PUSH" function



2.2 Touch Screen control operation

The oven is equipped with a Touch Screen control and an adjustment knob.

The Touch Screen control works by touching the icon of the displayed parameter and/or function with your finger (only use dry and clean fingers and no other tool such as knives, forks or other objects in general).

Turning the adjustment knob clockwise/anti-clockwise changes the selected operating parameter, modifying the value shown on the display. Pressing it slightly ("push" function) confirms the selected operating parameter and corresponding set value, switching automatically to the next operating parameter.

2.3 Switching on

The oven is equipped with an "ON/OFF" button to electrically power the electronic control board and activate its operational functionality (Fig. 1).

The button (A) is not directly visible as it is located under the base of the oven, in the direction of the door sensor: an identification plate (B) on the side indicates its presence.

To activate the oven function, set the button to "ON".

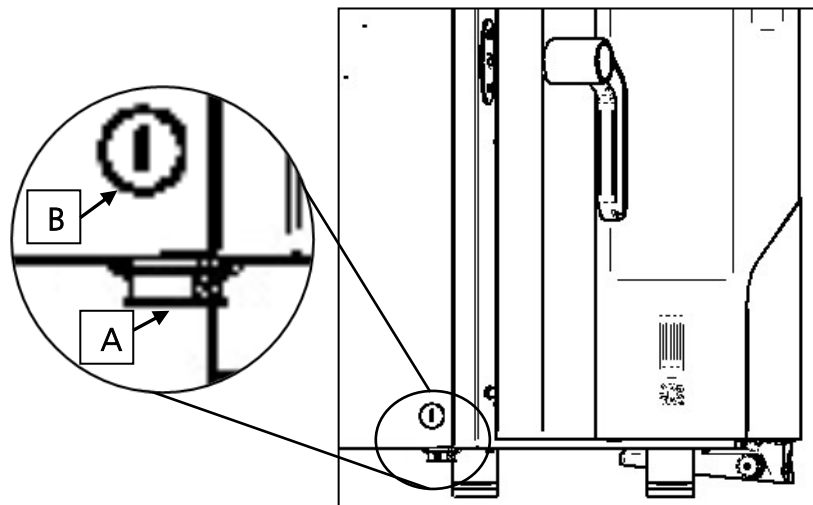


Fig.1

Stand-by and "lock" of display


If the oven is not used (no operation is being performed), the stand-by mode is automatically activated after 5 minutes.

In this configuration, the current time is shown in the center of the display. To reactivate the functional mode of the oven, just double tap display.

Using the Touch Screen display






TOUCH (confirms the active function, the selected operating parameter and the corresponding set value)

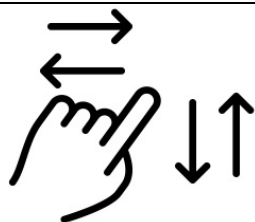


SCROLL (selects the active function and the set parameter value)



Examples:

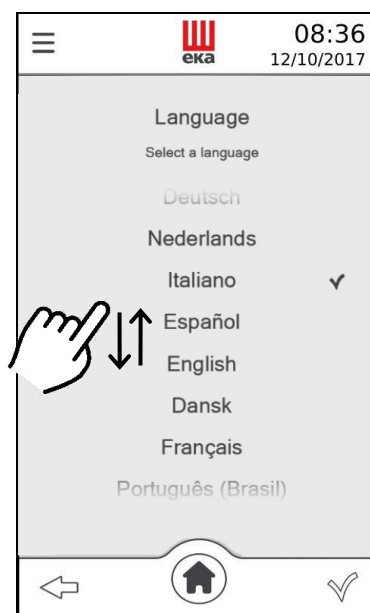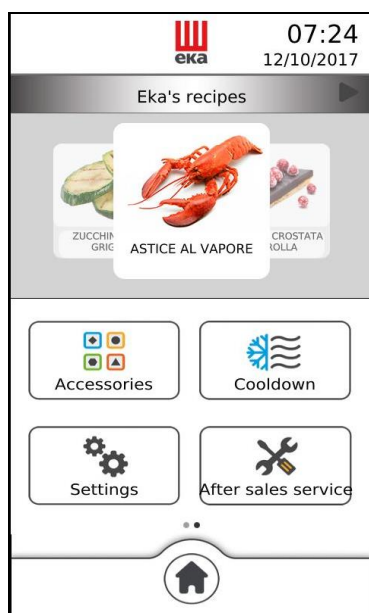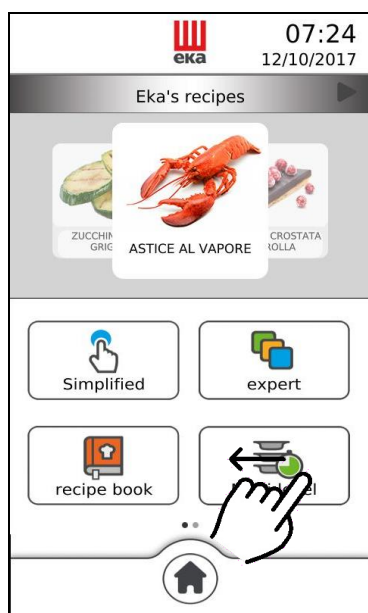

Using the knob

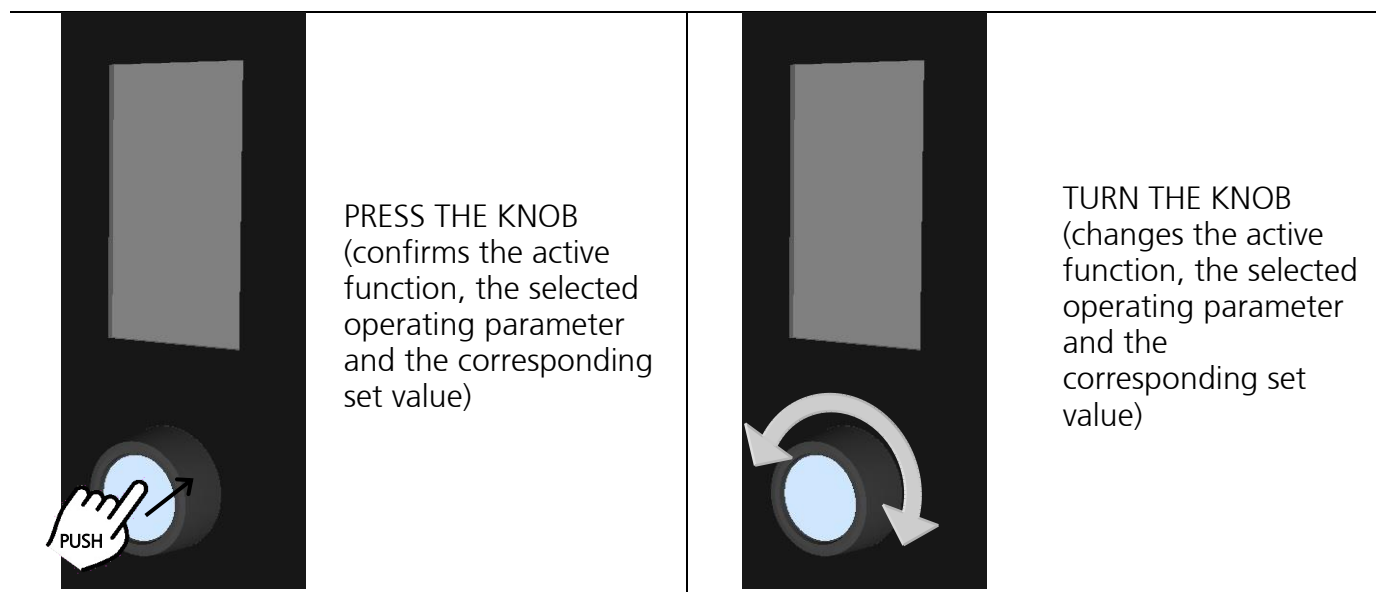

Examples:

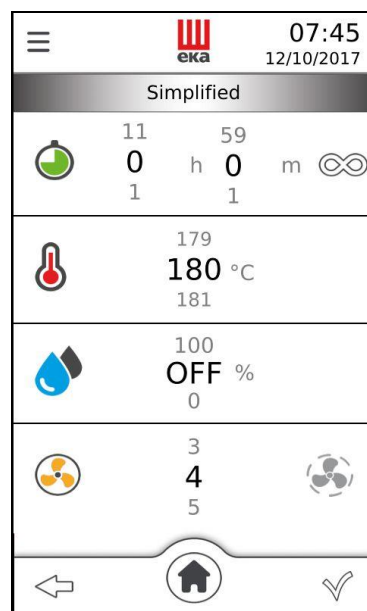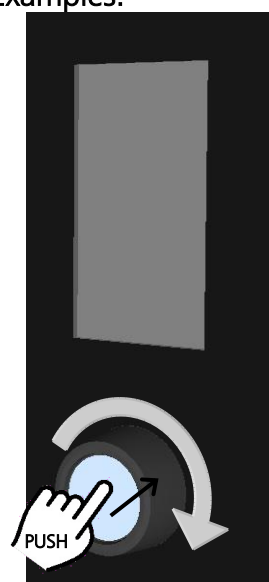

By turning the knob clockwise, you can select the various active functions and the values of the operating parameters in sequence. Pressing the knob again confirms the active function and the value of the operating parameter.

2.3 Explanations of the symbols:

	CONFIRM	Confirms the set operating parameter
	START	Starts the cooking cycle
	STOP	Stops the cooking cycle
	BACK	Goes back to the previous screen
	HOME	Goes back to the main screen
	ADDITIONAL FUNCTIONS	Accesses the additional functions
	ON	Activates the indicated function
	OFF	Deactivates the indicated function
	ADD	Adds a baking level when using the "Multilevel" function/add cooking steps
	DELETE	Deletes the unwanted data inside the selected function
	"BROWSE" THE VARIOUS MENUS/NAVIGATE BETWEEN THE VARIOUS MENUS/WINDOWS	"Browse" the data of the various menus + ADD COOKING STEPS
	RECIPE NOT SAVED IN THE RECIPE BOOK	The set recipe is not saved in the recipe book
	RECIPE SAVED IN THE RECIPE BOOK	The set recipe is saved in the recipe book
	RECEPTIVE MENU	The recipe list is sorted by type
	ADDITIONAL INFORMATION	Displays additional information (if any)
	STOP "COOLING" or "WASHING"	The "COOLING"/"WASHING" function stops

2.4 "HOME" screen

The "Home" screen (Fig.7) appears once the first switch-on procedure is completed.

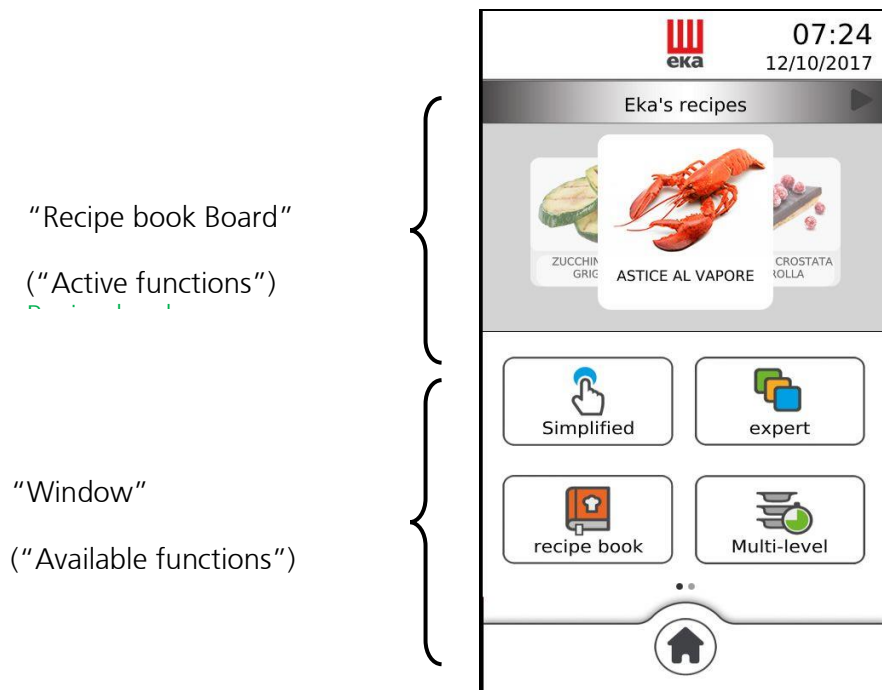


Fig.7

The "active functions" are those used by the oven.

The "available functions" are those that can be potentially used by the oven for its operation. And they are:

- SIMPLIFIED MODE
- ADVANCED MODE
- RECIPE BOOK
- MULTI LEVEL
- ACCESSORIES
- COOLING
- SETTINGS
- TECHNICAL SERVICE

The "Home" screen can be activated whenever the "🏠" symbol is touched.

2.5 Operating parameters



COOKING TIME

from 1 minute to 11 hours and 59 minutes or INFINITE
(∞ = OFF ∞ = ON)



COOKING TEMPERATURE

from 30°C to 270°C



CORE TEMPERATURE

from 0 to 100°C (only in "Advanced Mode")



ΔT TEMPERATURE

from 0 to 100°C (only in "Advanced Mode")



HUMIDITY

from 0 to 100% with 10% step or OFF



FAN SPEED

from 1 to 5



SEMI STATIC

from 1 to 5



MANUAL HUMIDIFICATION KEY

Humidification always active



MANUAL DRYING KEY

Drying always active



INSIGHTS

- "SEMI-STATIC" MODE

"Semi-static" baking is a mode that allows motors to be activated only when the heating elements are operating. **The mode is activated by touching the "SEMI-STATIC" symbol on the display.**

The fans are activated in order to distribute the heat generated by the heating elements and make the temperature inside the cooking chamber even. In this way static oven operation is reproduced.

- HUMIDIFICATION / DRYING OPERATION

Using the algorithms, the oven is able to detect the actual percentage of humidity/steam in the cooking chamber. This independently activates drying or humidification. If, for example, there is 80% of humidity in the cooking chamber and a value of 20% is set on the display, the oven automatically detects that the humidity present is greater than that set and so independently activates the drying system; otherwise, if a higher value of humidity compared to that detected in the cooking chamber is set on the display, the oven independently activates the input of humidity/steam. **The value "0" indicates no presence of humidity/steam in the cooking chamber** (automatic activation of the drying system). **The "OFF" value deactivates the automation of the system** that manages "the climate" in the cooking chamber, and the

amount of humidity/steam or drying can only be manually activated by touching the "MANUAL HUMIDIFICATION KEY" or "MANUAL DRYING KEY" symbols on the display.

2.6 Additional functions:



PRE-HEATING

The **"PRE-HEATING"** function can be enabled or disabled by the user; to enable it, set the temperature increase with respect to the temperature set in "phase 1". For example, if a cooking temperature of 180°C ("phase 1") and a PREHEATING temperature of 50°C is set, a temperature value of 230°C will be reached inside the cooking chamber.

The "PRO" function guarantees optimal preheating for cooking frozen products.

A buzzer warns that this temperature has been reached and the display shows the following message: **"PRE-HEATING OK OPEN THE DOOR"**. The temperature is maintained until the door is opened.

Open the door, put the food in the oven, close the door: the cooking cycle starts automatically.

The **"PRE-HEATING"** function cannot be used together with the delayed start.

The pre-heating temperature cannot exceed 270°C.



MAINTENANCE

The **"MAINTENANCE"** function can be enabled or disabled by the user; when enabled in the cooking program, it becomes operational in the last step of the program and it consists in maintaining the temperature inside the cooking chamber at 80°C. This function is used to keep food warm at the end of cooking, for as long as necessary. It stops when the door is opened.



POSTPONE

The **"POSTPONE"** function can be enabled by the user in the cooking program; when enabled, it allows a "delayed" start of the cooking cycle: useful for products that must be allowed to rise before being cooked.

The "delayed" start can be preset for a time between 1 minute and 11h and 59'. During this time only the cooking chamber lighting is active.

This function cannot be enabled together with "pre-heating".

2.7 "Simplified" mode function (allows a single cooking step)

The following parameters can be set by touching the "Simplified" mode icon on the display:

- Cooking time
- Cooking temperature
- Humidity %
- Fan speed
- "Semi-static" cooking



Fig. 8



Fig. 9

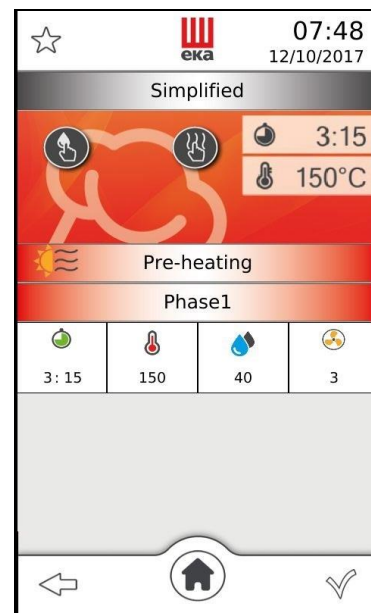


Fig. 10

The parameter value is set by sliding, up or down, your finger on the "number" next to the parameter (Fig. 8), to the desired value; or by turning the knob clockwise or anti-clockwise to the desired value. This value is confirmed by pressing the knob; turning it again goes directly to the next parameter.

The "≡" symbol is present at top-left of the display; touching it, displays a window (Fig. 9) which allows enabling the following functions:

- Pre-heating
- Maintenance

Touching "✓" displays the "summary" screen (Fig. 10); touching it again, enables the cooking cycle. The following are displayed at the top-right of the screen: the remaining cooking time and the actual temperature in the cooking chamber. The "👉" symbol is on the left of the screen and the "👈" symbol is in the centre. The "summary" screen contains all parameters and functions that can be set for a single cooking step. By selecting each individual parameter, you can edit the set value at any time; simply touch the symbol of the desired parameter: a window appears indicating the parameter and its set value. The new value can be set by sliding the finger or turning the knob; touching the "✓" symbol in the window automatically confirms the value and the window goes back to "summary" screen mode; vice-versa, if the "👈" symbol is touched the new parameter value is not confirmed and the previous value remains active. Bottom-left of the "summary" screen has the symbol "👈" which allows to go back to the previous screen, while bottom-right has the symbol "✕" which allows stopping the cooking cycle.

2.8 "Advanced" mode function (allows 10 cooking steps)

The following parameters can be set by touching the "Advanced" mode icon on the display:

- Cooking steps (from 1 to 10)
- Cooking time
- Cooking temperature
- Core temperature
- ΔT Temperature
- Humidity%
- Fan speed
- "Semi-static" cooking

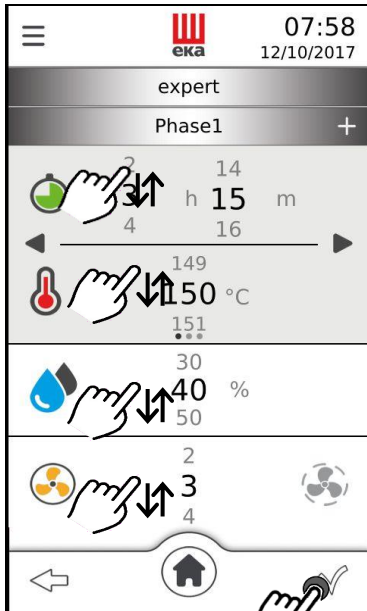


Fig. 11

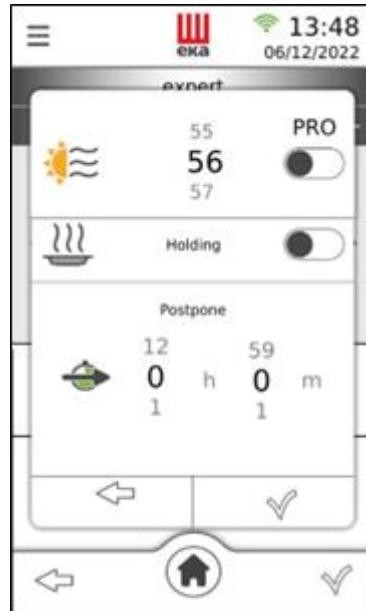


Fig. 12

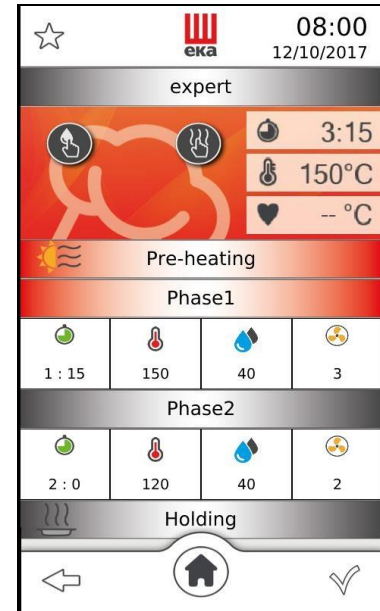


Fig. 13

The parameter value is set by sliding, up or down, your finger on the "number" next to the parameter (Fig. 11) to the desired value; or by turning the knob clockwise or anti-clockwise to the desired value. This value is confirmed by pressing the knob; turning it again goes directly to the next parameter.

The "≡" symbol is present at top-left of the display; touching it, displays a window (Fig. 12) which allows enabling the following functions:

- Pre-heating
- Maintenance
- Postpone

Touching "✓" displays the "summary" screen (Fig. 13); touching it again, enables the cooking cycle. The following are displayed at the top-right of the screen: the remaining cooking time, the actual temperature in the cooking chamber and the actual temperature of the core probe, if enabled (in this case, the "Cooking time" parameter is disabled). The "👉" symbol is on the left of the screen and the "👈" symbol is in the centre. The "summary" screen contains all parameters and functions that can be set for each cooking step. By selecting each individual parameter, you can edit the set value at any time; simply touch the symbol of the desired parameter: a window appears indicating the parameter and its set value. The new value can be set by sliding the finger or turning the knob; touching the "✓" symbol in the window automatically confirms the value and the window goes back to "summary" screen mode; vice-versa, if the "👈" symbol is touched the new parameter value is not confirmed and the previous value remains active. Bottom-left of the "summary" screen has the symbol "👈" which allows to go back to the previous screen, while bottom-right has the symbol "✕" which allows stopping the cooking cycle.



INSIGHTS:

• COOKING WITH CORE PROBE

There are two parameters to be set to cook with core probe: **core temperature** and **cooking temperature**. The cooking time is no longer a control parameter and so does not appear on the "summary screen".

If the cooking cycle consists of a single step, the oven works until the temperature detected by the core probe is reached inside the food. If the cooking cycle consists of several steps and core probe cooking is enabled in one of them, once the temperature detected by the core probe is reached, the oven continues to work switching to the next step.

If, during a cooking cycle with needle shaped thermal probe (core probe) the probe is not properly connected, the display shows an error with corresponding sound alarm.

IMPORTANT

The needle shaped thermal probe must be inserted inside the food, in the thickest area, avoiding contact with any bones.

If a cooking cycle with core probe is enabled, the needle shaped thermal probe must already be connected to the specific socket on the bottom of the oven; otherwise, the display will show the corresponding alarm.

With the door closed, the needle shaped thermal probe cable must pass between the door gasket (bottom area) and the door itself.

• COOKING WITH " ΔT " TEMPERATURE

There are two parameters to be set to cook with " ΔT " temperature: **core temperature** and " **ΔT temperature**". The cooking time is no longer a control parameter and so does not appear on the "summary screen".

The " ΔT " temperature parameter makes it possible to maintain constant, throughout the cooking step, the difference between the temperature inside the food (temperature detected by the needle shaped thermal probe) and the temperature inside the cooking chamber (cooking temperature). In this way the value of the temperature in the cooking chamber becomes the sum of the temperature inside the food and the set " ΔT " temperature. In practical terms there is a slow increase of the temperature in the cooking chamber: the food undergoes a prolonged and delicate cooking process.

If the cooking cycle consists of a single step, the oven works until the temperature detected by the core probe is reached inside the food. If the cooking cycle consists of several steps and cooking with " ΔT " temperature is enabled in one of them, once the temperature detected by the core probe is reached, the oven continues to work switching to the next step.

If, during a cooking cycle with " ΔT " temperature and needle shaped thermal probe (core probe) the probe is not properly connected, the display shows an error with corresponding sound alarm.

2.9 Cooking cycle with core probe "Advanced" mode

Set the following parameters by touching the "Advanced" mode function icon on the display (Fig. 14) and then sliding your finger on the display to the left (Fig. 15):

- Core temperature
- Cooking temperature
- Humidity %
- Fan speed
- "Semi-static" cooking

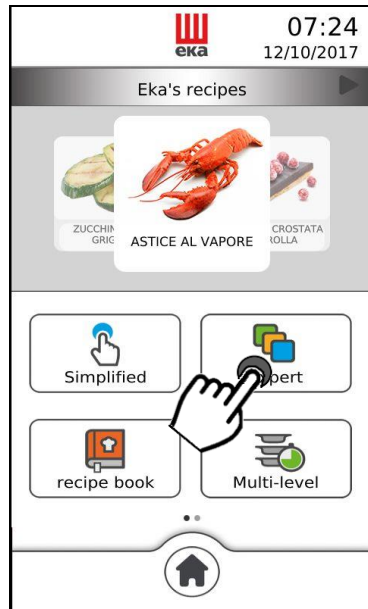


Fig. 14

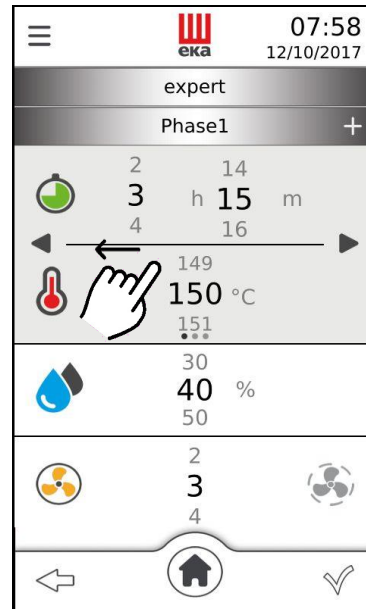


Fig. 15

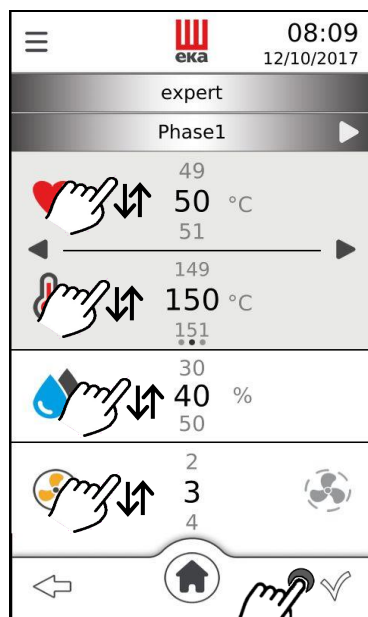


Fig. 16

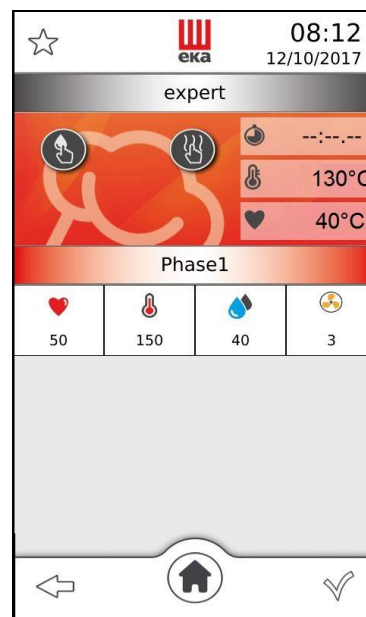


Fig. 17

The parameter value is set by sliding, up or down, your finger on the "number" next to the parameter (Fig. 16) to the desired value; or by turning the knob clockwise or anti-clockwise to the desired value. This value is confirmed by pressing the knob; turning it again goes directly to the next parameter.

Touching "✓" displays the "summary" screen (Fig. 17); touching it again, enables the cooking cycle. The following are displayed at the top-right of the screen: the actual temperature in the cooking chamber and the actual temperature of the core probe. The "🔥" symbol is on the left of the screen and the "👤" symbol is in the centre. The "summary" screen contains all parameters and functions that can be set for each cooking step. By selecting each individual parameter, you can edit the set value at any time; simply touch the symbol of the desired parameter: a window appears indicating the parameter and its set value. The new value can be set by sliding the finger or turning the knob; touching the "✓" symbol in the window automatically confirms the value and the window goes back to "summary" screen mode; vice-versa, if the "⬅️" symbol is touched the

new parameter value is not confirmed and the previous value remains active. Bottom-left of the “summary” screen has the symbol “←” which allows to go back to the previous screen, while bottom-right has the symbol “✕” which allows stopping the cooking cycle.

2.10 Cooking cycle with core probe and ΔT temperature “Advanced” mode

Set the following parameters by touching the “Advanced” mode function icon on the display (Fig. 18) and then sliding your finger twice on the display to the left (Fig. 19):

- Core temperature
- ΔT Temperature
- Humidity %
- Fan speed
- “Semi-static” cooking

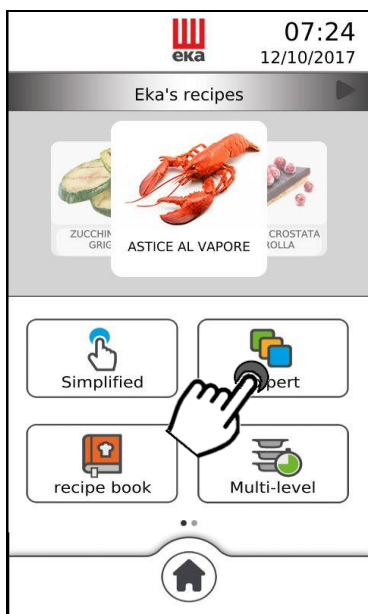


Fig. 18

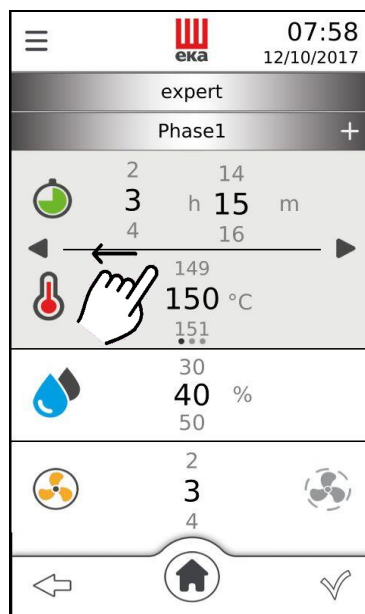


Fig. 19

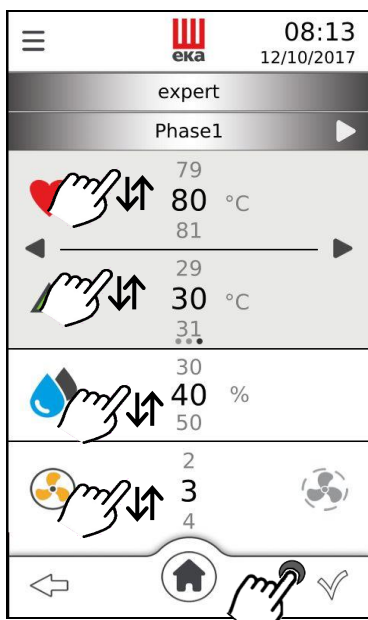


Fig. 20

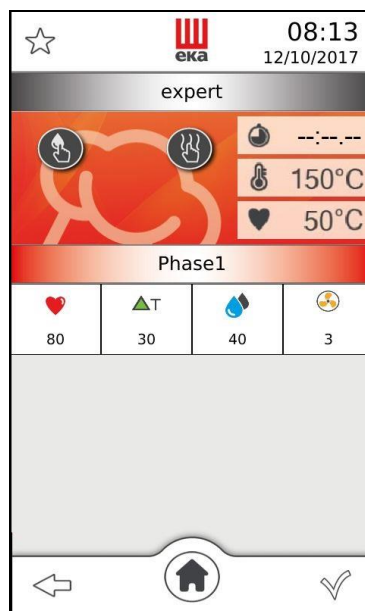


Fig. 21

The parameter value is set by sliding, up or down, your finger on the “number” next to the parameter (Fig. 20) to the desired value; or by turning the knob clockwise or anti-clockwise to the desired value. This value is confirmed by pressing the knob; turning it again goes directly to the next parameter.

Touching “✓” displays the “summary” screen (Fig. 21); touching it again, enables the cooking cycle. The following are displayed at the top-right of the screen: the actual temperature in the cooking chamber and the actual temperature of the core probe. The “🔥” symbol is on the left of the screen and the “👤” symbol is in the centre. The “summary” screen contains all parameters and functions that can be set for each cooking step. By selecting each individual parameter, you can edit the set value at any time; simply touch the symbol of the

desired parameter: a window appears indicating the parameter and its set value. The new value can be set by sliding the finger or turning the knob; touching the "✓" symbol in the window automatically confirms the value and the window goes back to "summary" screen mode; vice-versa, if the "↩" symbol is touched the new parameter value is not confirmed and the previous value remains active. Bottom-left of the "summary" screen has the symbol "↩" which allows to go back to the previous screen, while bottom-right has the symbol "✕" which allows stopping the cooking cycle.

2.11 Cooking cycle with "Pre-heating" function

The "Pre-heating" function can be set before or after setting the cooking cycle parameters. It can be set in both "Simplified" or "Advanced" mode.

Simply touch the "≡" symbol at the top-left of the "Parameters" screen: a window appears indicating the "Pre-heating" function symbol  and the symbol of the switch not enabled (). Touching the switch enables the function (); touching it again, disables it. Touching the "✓" symbol on the window automatically confirms the function and the window goes back to show the "Parameters" screen; vice-versa, if the "↩" symbol is touched, the function is not confirmed. The window still goes back to "Parameters" screen mode.

The "Pre-heating" function cannot be enabled together with the "delayed" start.

2.12 Cooking cycle with "Maintenance" function

The "Maintenance" function can be set before or after setting the cooking cycle parameters. It can be set in both "Simplified" or "Advanced" mode.

Simply touch the "≡" symbol at the top-left of the "Parameters" screen: a window appears indicating the "Maintenance" function symbol  and the symbol of the switch not enabled (). Touching the switch enables the function (); touching it again, disables it. Touching the "✓" symbol on the window automatically confirms the function and the window goes back to show the "Parameters" screen; vice-versa, if the "↩" symbol is touched, the function is not confirmed. The window still goes back to "Parameters" screen mode.

2.13 Cooking cycle with "Postpone" function

The "Postpone" function can be set before or after setting the cooking cycle parameters. It can only be set in "Advanced" mode.

Simply touch the "≡" symbol at the top-left of the "Parameters" screen: a window appears indicating the "Postpone" function symbol . The time value (in hours and minutes) for the "delayed" start of the cooking cycle is set by sliding your finger, up or down, on the "number" next to the symbol, to the desired value. Touching the "✓" symbol on the window automatically confirms the function and the window goes back to show the "Parameters" screen; vice-versa, if the "↩" symbol is touched, the function is not confirmed. The window still goes back to "Parameters" screen mode. The "Pre-heating" function cannot be enabled together with the "Postpone" function.

2.14 Program storage (recipe)

The recipes (programs) created in "Simplified" or "Advanced" mode can be stored by touching the "☆" symbol at the top-left of the "summary" screen: the "Image and recipe name" screen appears and a window with the text: "**write here**". Touching the text displays an alphanumeric keypad (Fig. 22) to be used to enter the recipe name.

To write the name of the recipe in the desired language, among the 42 available, tap on the display the symbol "🌐" and choose the appropriate alphabetical characters. The name of the chosen language is highlighted with the writing on the lower part of the alphanumeric keyboard.

Touching the "✓" symbol confirms the recipe name and displays the screen "Product type" (Fig. 23).

By touching the desired product type name, the confirmation symbol "✓" appears next to the name; then, touching the "✓" symbol at the bottom-right of the screen stores the recipe; vice-versa, by touching the "←" symbol the recipe is not stored and the screen goes back to "Image and recipe name" mode.



Fig.22

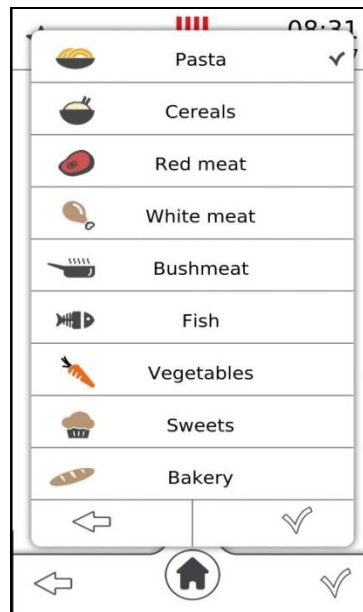


Fig.23

2.15 Program storage (recipe) with picture

To program a recipe with its picture, proceed as follows:

- store the photo with the image of the recipe in a pen drive
- insert pen drive into the USB plug
- write the recipe's name as described previously in point 2.14
- the photo of the recipe will automatically appear during the writing of the relative recipe to be memorized

Important

Only one picture at a time must be stored in the pen drive to be combined with the corresponding recipe. To memorize more recipes with your own picture, the operation described in point 2.15 must be repeated for each recipe every time.

The picture must strictly comply with the following requirements:

- Must have ".png" format
- Must be 205x105 pixels
- Must be named "recipe"

2.16 Recipe book

Touching the "🏠" symbol on the display shows the "Recipe book" icon. Touching this icon again displays another 3 icons that represent the 3 different types of recipes available (Fig. 24):

- Eka Recipes
- Chef Recipes

By touching the relative icon, one of the 3 types of recipes can be selected: the "Menù ricette" (Recipe menu) screen appears containing a series of dishes divided into 9 categories arranged on as many windows overlapping one another (Fig. 25). Each window is identified by the category name:

- | | | |
|-------------|---------------|---------------|
| • PASTA | • WHITE MEATS | • VEGETABLES |
| • CEREAL | • GAME | • DESSERTS |
| • RED MEATS | • FISH | • BAKED GOODS |

To view all 9 "windows", if already occupied by at least one stored recipe, simply slide up or down the finger on the "windows" of the screen. The recipes, available in the "windows", can be displayed in a single screen by touching the symbol  (Fig. 26) or, separately, by sliding, to the right or left, the finger on the photos that represent them.

Once the recipe has been selected, the "summary" screen appears (Fig.27) where all the parameters relating to the cooking cycle of the recipe appear. Furthermore, by touching the "  " symbol, information about the selected recipe can be displayed, if available.

All "Eka Recipes" are already available in the "Home" screen: by repeatedly touching the "▶" symbol and/or "◀" symbol, all "Chef Recipes" and "Most used recipes" also become available. To select the wanted one, simply slide, right or left, your finger on the photo representing the recipe dish; then, to be able to use it in the cooking cycle, simply touch the selected photo: the "summary" screen appears with the dish name. Touch "✓" to start cooking.

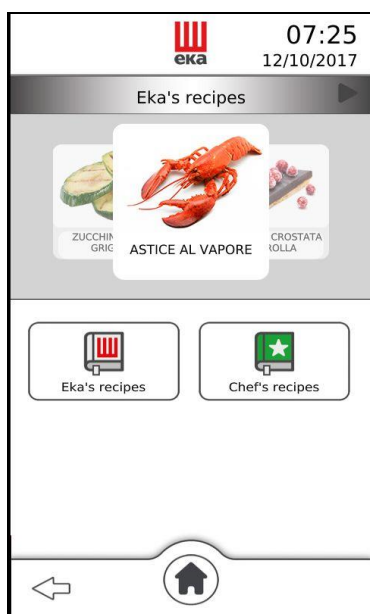


Fig.24

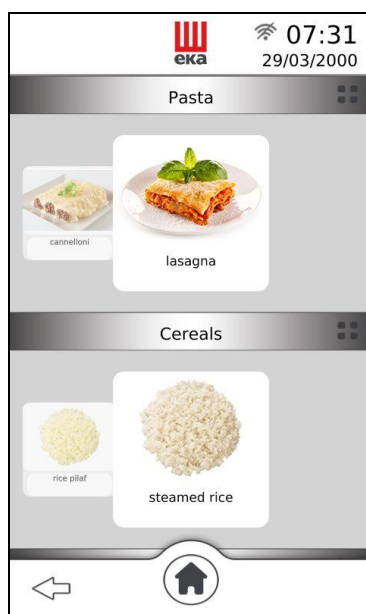


Fig.25

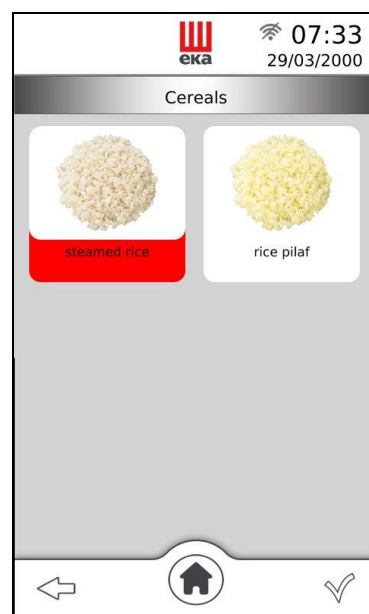


Fig.26

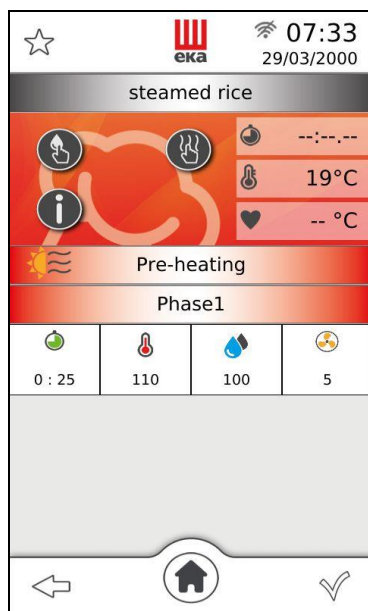


Fig.27

2.17 How to delete cooking programs from the "CHEF" library

Only the recipes in the "CHEF" recipe book can be deleted by operating as follows:

- Touch the symbol  and select the recipe you want to delete: the name of the recipe is highlighted on a red background (Fig. 28)
- Touch the symbol , a pop-up message will be displayed in order to confirm or undo the operation
- Touch the symbol  to confirm the cancellation, touch the symbol  to undo the operation.

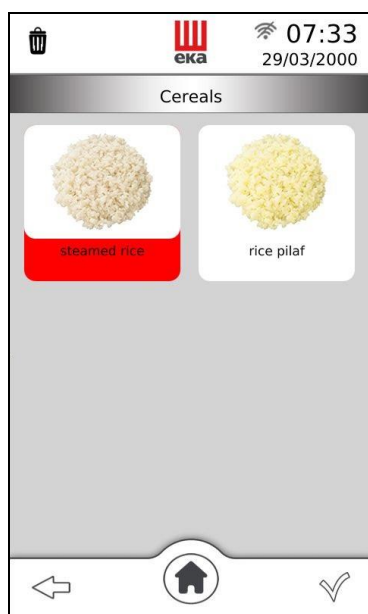


Fig. 28

Important

Only one recipe can be deleted at a time.

2.18 Import / export from "USB" to "Chef Recipes"

The USB socket available to the lower door hinge allows to import/export cooking programs from/to the oven's user library by using a USB stick

After the USB stick has been connected to the available socket, scroll the screen to the left hand side and tap to the SETTINGS icon.

Scroll down the SETTINGS options and look for IMPORT/EXPORT to/from USB (see picture 26):

- Export all recipes
- Import all recipes
- Export some recipes
- Import some recipes



Fig. 29

2.18.1 Export all recipes (stored programs)

The user through the "USB plug" can "export" all the "Chef Recipes" into a "pen drive".

After following the instructions in point 2.18, simply touch the words "Export all recipes" and automatically "load" all the "Chef Recipes" into the USB stick.

Important

If "Export all cooking programs" has been earlier activated it won't be possible to activate the option "Import a single cooking program" temporarily. The option "Import all cooking programs" could be activated indeed.

2.18.2 Import all recipes (stored programs)

The user through the "USB plug" can "import" all the recipes of a "pen drive" into the "Chef Recipes".

After following the instructions in point 2.18, simply touch the words "Import all recipes" and automatically download all the recipes of the USB stick into the "Recipes Chef".

Important

If a recipe with the same name as the one to be "loaded" is already stored in the food category, the word "_copy" will be added to the name to identify it.

If the "pen drive" does not contain stored recipes (programs), when "Import all recipes" is activated, a "window" appears that shows: "file not found".

If the "pen drive" does not contain stored recipes (programs), when "Import all recipes" is activated, a "window" appears that shows: "file not found".

2.18.3 Export some recipes (stored programs)

The user through the "USB plug" can "export" some of the "Chef Recipes" into a "pen drive". After following the instructions of point 2.18, simply touch the words "Export some recipes": the "Export Recipes" screen appears, where the names of the food categories that include at least one stored recipe are highlighted.

By touching the category name, a "window" appears with all the recipes (programs) stored in that category. Simply touch the name of the recipe you want to "export" and on the right side of the "window" the symbol "✓" appears. Repeat the same operation for each category and for each recipe that you want to "export". By touching the "✓" symbol in the lower right of the screen, the "Chef Recipes" selected automatically are loaded into the USB stick: a "window" appears on the screen, highlighting the "export" and the number of "exported" recipes.

Important

If you have activated "Export some recipes" it is not possible to activate "Import all recipes" in the following way, but only "Import some recipes" can be activated.

2.18.4 Import some recipes (stored programs)

The user through the "USB plug" can "import" some recipes of a "pen drive" into the "Chef Recipes". After following the instructions in point 2.18, simply touch the words "Import some recipes": the "Import Recipes" screen appears, where the names of the food categories in the "pen drive" are highlighted as they include at least one stored recipe.

By touching the category name, a "window" appears with all the recipes (programs) stored in that category. Simply touch the name of the recipe you want to "import" and on the right side of the "window" the symbol "✓" appears. Repeat the same operation for each category and for each recipe that you want to "import". By touching the "✓" symbol in the lower right hand corner of the screen, the selected recipes of the pen drive are automatically downloaded into the "Chef Recipes": a "window" appears on the screen in which it is highlighted " import "and the number of" imported "recipes.

Important

If a recipe with the same name as the one to be "loaded" is already stored in the food category, the word "_copy" will be added to the name to identify it.

If the "pen drive" does not contain stored recipes (programs), when "Import some recipes" is activated, a "window" appears that highlights: "file not found".

2.19 "Multi-level" function

The "Multi-level" function available on the "Home" screen (🏠) allows using the "Servizio" (Service) mode.

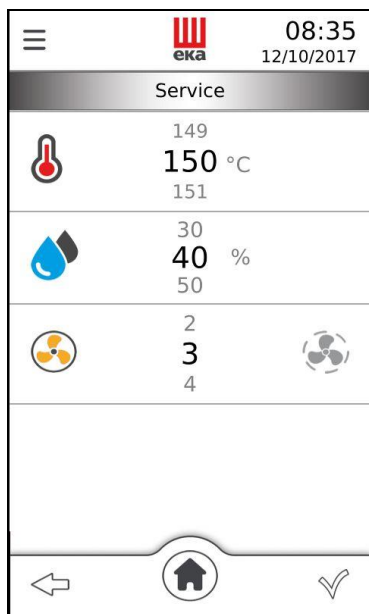


Fig. 30

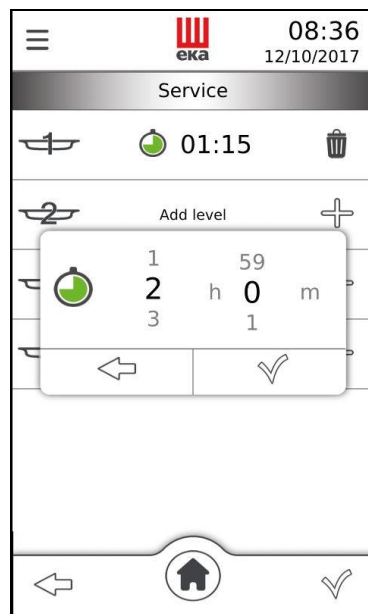


Fig.31

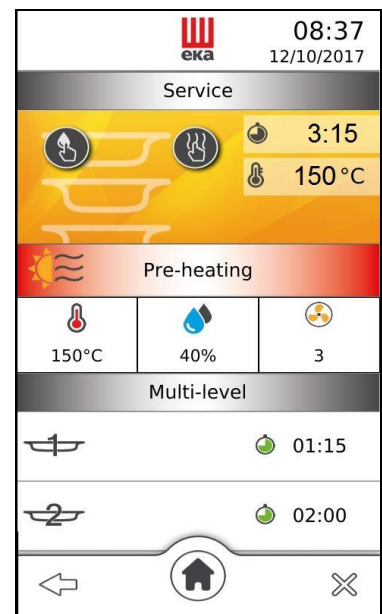


Fig.32

Touching the "Multi-level" icon displays the "Service" mode screen, with the parameters that can be set (Fig. 30):

- Cooking temperature
- Humidity %
- Fan speed
- "Semi-static" cooking

The parameter value is set by sliding, up or down, your finger on the "number" next to the parameter, to the desired value; or, by turning the knob clockwise or anti-clockwise to the desired value. This value is confirmed by pressing the knob; turning it again goes directly to the next parameter.

Touching the "✓" symbol starts the cooking cycle, the "add level" screen (Fig.31) appears with the availability of the number of cooking levels related to the oven model. It is possible to select a different cooking time for each level.

Touching the "+" symbol displays a window with the parameter "Time" to be set (in hours and minutes); slide, up or down, your finger on the "number" next to the parameter, to the desired value. Touching the "✓" symbol on the window confirms the value and it starts counting the cooking cycle; the screen with the parameter value set and the "🗑️" symbol appear (Fig.31). Touching the "bin" symbol deletes the parameter value and displays the "add level" screen again. The "Time" parameter can also be set by turning the knob clockwise or anti-clockwise, to the desired value. This value is confirmed by pressing the knob: the screen with the parameter value set and the "🗑️" symbol appear.

Touching the bottom-right symbol "✓" displays the "summary" screen (Fig.32) which shows the value of the set parameters and the number of levels for which the time is operational, with the corresponding countdown. By sliding, up or down, your finger on the numbered levels screen, you can view the remaining cooking time for all of them. The value of the parameters can be changed during cooking also from the "summary" screen: simply touch the parameter symbol and, on the appearing window, slide your finger over the value to be changed or rotate the knob. The new value is confirmed by touching the "✓" symbol on the window or pressing the knob.

When the set cooking time is reached in one of the levels, the "summary" screen displays a window with the message "Remove tray" and corresponding level number. A special buzzer warns to open the oven door and take the dish out of the oven.

With the "Multi-level" function, the oven operation must be manually interrupted after the last dish is taken out.

2.20 Accessories

From the "Home" screen (🏠) slide your finger to the left on the "Available functions" window: the "Accessories" icon appears (Fig. 33); touching it displays the window that shows the types of accessories that can be used (Fig. 34):

- WASHING)

- PROOFER/HOLDING CABINET

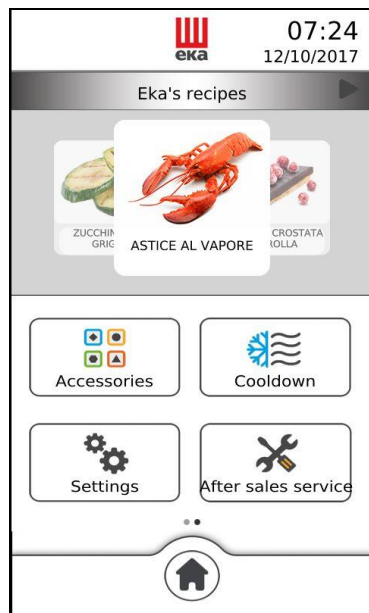


Fig. 33



Fig. 34

Touching the "Washing" icon displays the screen with the modes available (Fig. 35):

- L1 Eco (39')
- L2 Normal (69')
- L3 Intensive (100')
- R Rinse (9')
- Pump loading (2')

Touching the "text" of the desired mode displays the window that shows the operating time of the mode (Fig. 36). Touching the "✓" symbol starts the washing: the operating screen (Fig. 37) displays the text identifying the

washing mode in progress, the washing time countdown and the "STOP" symbol which allows disabling the washing in progress at any time, automatically enabling the "Rinse" mode.

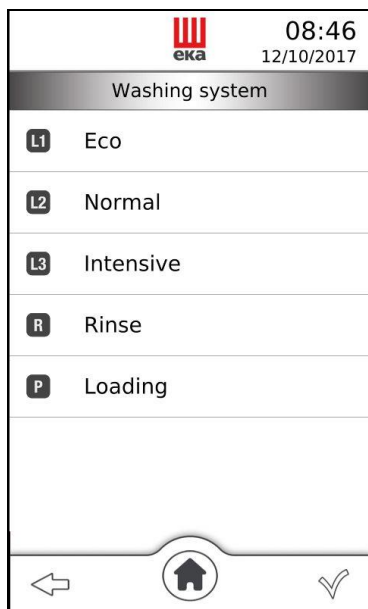


Fig. 35

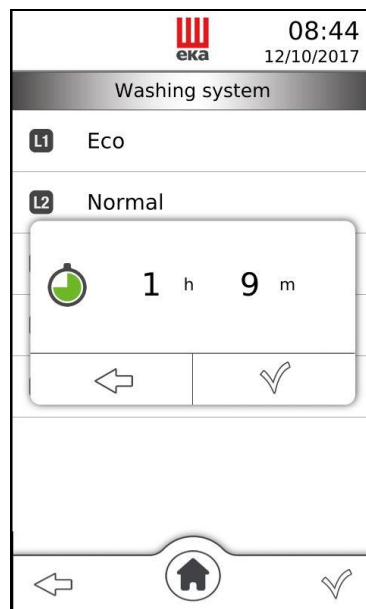


Fig. 36



Fig. 37

2.21 Cooling

From the "Home" screen (🏠) slide your finger to the left on the "Available functions" window: the "Cooling" icon appears (Fig. 38); touching it enables the function and the corresponding window ("Fast cooling") appears, displaying in real time the temperature in the cooking chamber. Open the oven door to enable the function.

The function may be disabled at any time by touching the "STOP" symbol; otherwise, it disables automatically when the temperature inside the cooking chamber reaches 40°C.

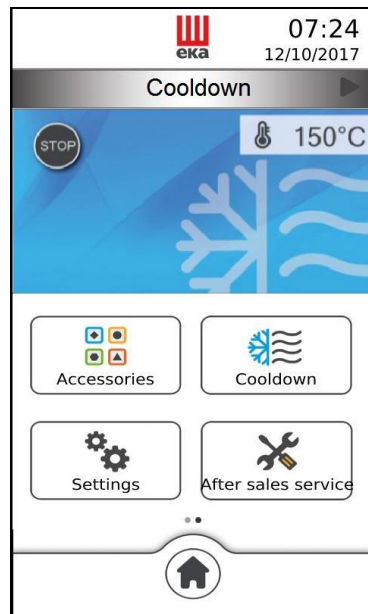


Fig.38

2.22 Settings

From the “Home” screen () slide your finger to the left on the “Available functions” window: the “Settings” icon appears (Fig.39); touching it displays the “summary” screen which shows the settings available (Fig.40):

- Display brightness
- Time and date
- Language
- Sounds
- Import/export from Flash drive
- HACCP
- Wifi
- Version info

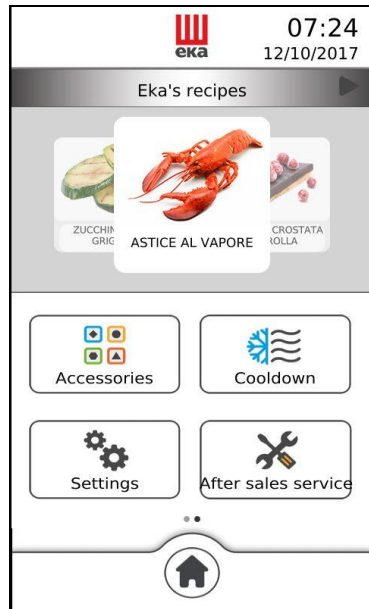


Fig. 39



Fig.40

Touching the icon of the desired setting displays a window in which you can modify the state of the setting. By touching the icon again after changing the state of the setting, the window disappears and the “summary” screen of the settings appears again.

	Display brightness	You can adjust the brightness of the display
	Time and date	You can set the desired time and date
	Language	You can select the desired language
	Sounds	You can enable () or disable () the buzzer volume (beep)
	Import/export from Flash drive	You can import (“upload”) and export (“download”) the cooking programs (recipes) via “USB pen drive”
	HACCP	You can enable () or disable () the “HACCP” function. The “HACCP” function has the purpose of recording the operative data of cooking cycles performed, constantly monitoring their progress. The “HACCP” data can be recorded into a “USB pen drive” which must be connected into the suitable “USB port” of the oven. All the data concerning the cooking done on the same day are contained in the same “HACCP” file.
	Wifi	You can connect to a Wifi network
	Version info	You can display the operational “firmware” version

2.23 "HACCP" function

The "HACCP" function has the purpose of recording the operative data of cooking cycles performed, constantly monitoring their progress.

2.23.1 Activating/deactivating the "HACCP" function

From the "Home" screen (🏠) slide your finger to the left on the "Available functions" window: the "Settings" icon appears; touching it displays the "summary" screen which shows the settings available (Fig. 41).

By touching the "HACCP" icon, the display shows a "window" indicating the **day/month/year** and with the "switch" symbol not activated (🔴). Touching the switch enables the "HACCP" function (🟢); touching it again, disables it. After activating the "HACCP" function, touch the "✓" symbol on the "window": the function is automatically confirmed and the "window" goes back to the summary screen with the "Settings".

Once activated, the "HACCP" function remains on until it is deactivated with the "switch" (🔴).

2.23.2 Downloading "HACCP" data on a USB flash drive

The "HACCP" data logged and saved during the operation of the oven can be **viewed on a PC** after "downloading" them on a "USB flash drive" connected to the dedicated "USB port" located on the bottom hinge of the oven door.

One can choose the exact day to view the logged "HACCP" data by proceeding as follows (Fig. 41):

from the "summary" screen that displays all the available "Settings", touch the "HACCP" icon: this will show the "window" with the **day/month/year** and with the "switch", which must be activated (🟢).

Slide up with your finger on the "window" until the "🔌" icon appears ("USB flash drive"). Make sure the "USB flash drive" is inserted correctly in the specific "USB port". Choose the day for which you want to know the "HACCP" data logged by sliding your finger up or down on the "**number**" indicating "**the day**" until you find the desired one (the month/year must be correct; if not, change them by following the same steps followed to choose the day).

Touch the "🔌" icon for a few seconds: **all the files** ("txt") logged during the operation of the oven are "downloaded" to the "USB flash drive", **from the selected day up to the last day the "HACCP" function was active**. The "**export completed**" message appears in the "window" with the related number of files transferred. All the "HACCP" data relating to the cooking carried out on the same day is in the same file. Basically, **every "HACCP" file contains an entire day of cooking**.



Fig. 41

Important

If the “USB flash drive” is not inserted after touching the “” icon for a few seconds, the “No USB” warning appears on the related “window”.

If any anomaly occurs during the cooking cycle and triggers an alarm, this will be logged in the “HACCP” data with the wording “Error Set Exx”, where “xx” is the number identifying the type of alarm (see table 5 on the “Possible alarms”).

The text (shown on the PC) of the logged “HACCP” data is only in English.

2.24 Wi-Fi network connection

Touching the “” icon the list of available Wi-Fi networks appears (Fig.41)
Touch the name of the internet connection to which you want to connect and then touch the “✓” symbol to confirm (Fig.42).

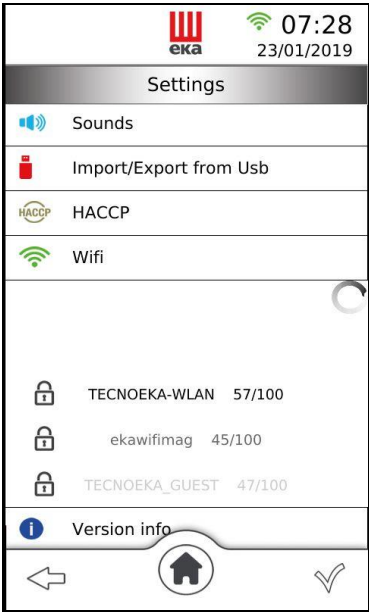


Fig.41

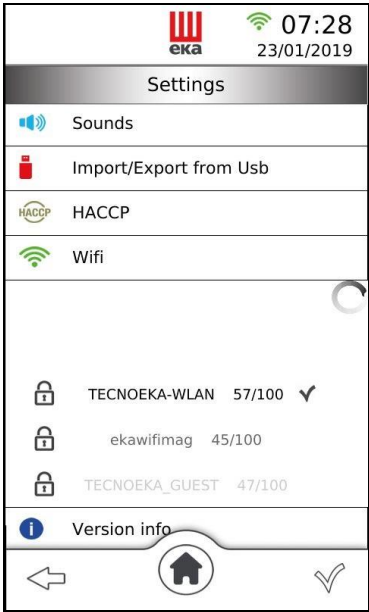


Fig.42

If the selected Wi-Fi network is password protected, the password request screen appears (Fig.43), proceed with the insertion of the password using the alphanumeric keypad and confirm by touching the symbol “✓”.



Fig.43

2.24.1 Software update availability (operative function update)

If a software update is available, the "software update availability" screen will appear (Fig.44).

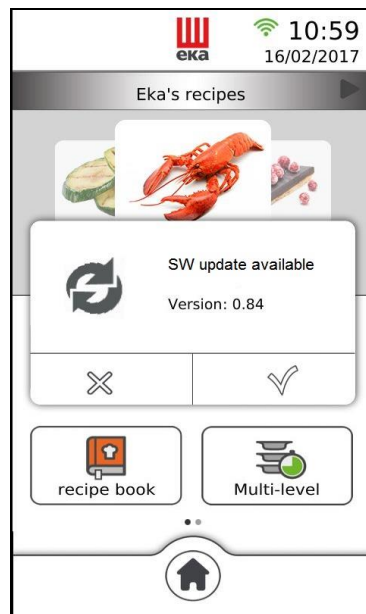


Fig.44

Touching the "✓" symbol, it activates the software update (from 5 to 10 min.), it ends when the "Home" screen reappears on the display.

Touching the "✗" symbol will not activate the update and the "Software update availability" screen will only reappear when the oven is electrically re-energized.

2.25 Technical Service

Not available

2.26 Wheeled models (mod. MKF 1611 TS - MKF 1664 TS - MKF 2011 TS)

These models are equipped with a special mobility system (patented) of the **internal door glass**. The system allows you to "slide" the **internal glass down** or **up**, according to the application needs.

Glass "down" (use without trolley)

To obtain this position the oven door must be completely opened and by exerting adequate force, "slide" the internal door glass down until the mechanical "lock" device is engaged: the closing "click" can be heard (Fig. 45).

This position of the internal door glass lets the cooking chamber be hermetically closed without the presence of the relevant tray trolley in or without needing to use a suitable closing partition.

The oven may be used for the "PRE-HEATING" function (paragraph 2.6), for the **SEMI-AUTOMATIC CLEANING** (paragraph 3.3) or **AUTOMATIC CLEANING** function of the cooking chamber (paragraph 3.4)



Fig. 45

Glass "up" (use with trolley)

To obtain this position, the oven door must be opened (even partially) and by acting on the suitable "lever" in the lower portion (right side) of the door, behind the external glass, activate the "release" device to let the internal glass "slide" up automatically.

This position of the internal glass of the door allows to use the oven for the normal cooking cycle with the tray trolley correctly inserted.

Important

If the internal glass "release" operation is performed before using the oven (cooking chamber still cold), it is recommended to completely open the door and act on the suitable "lever" from the inside of the door (fig. 46). If the internal glass "release" operation is performed after using the oven (cooking chamber is hot), it is recommended to partially open the door, let the hot air vent off, and act on the suitable "lever" from the outside of the door using adequate heat protection clothing (fig. 47).

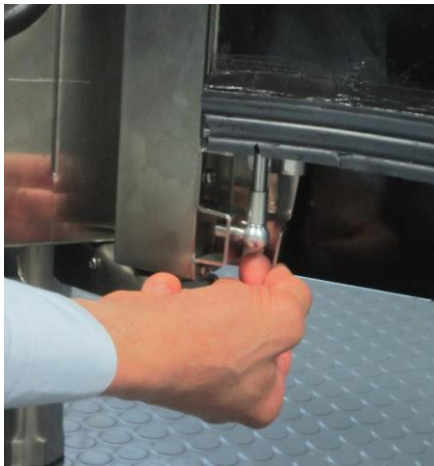


Fig. 46



Fig. 47

Glass "down" and door open with tray trolley in

With tray trolley in, the display shows the window with the words: **"Poorly positioned glass move the glass upwards"**. A sound alarm goes off, which is repeated intermittently. This internal glass position with the tray trolley in, **does not allow the door to be closed. If the trolley hits against the glass it might break it: injury hazard!**

By bringing the glass up, the alarm is disabled and the oven works properly.

Glass "up" and door closed with no tray trolley inserted

Without tray trolley in, the display shows the window with the words: **"Poorly positioned glass move the glass downwards"**. A sound alarm goes off, which is repeated intermittently. This internal glass position without the tray trolley in, **does not let the oven be used in any way**. By bringing the glass down, the alarm is disabled and the oven works properly.

3. Cleaning

3.1 Manual cooking chamber cleaning

For hygienic reasons it is good practice to clean the cooking chamber on a daily basis, at the end of every day the oven is used. Correct cleaning also prevents the formation of corrosive phenomena inside the chamber, as well as preventing the danger of accidental combustion due to any grease and food residues accumulated over time.

To aid cleaning remove the side grilles. The cleaning detergents must not contain abrasive substances or substances of acid/corrosive nature. In case of lack of appropriate detergents it is sufficient to clean the cooking chamber with a sponge soaked in warm soapy water or warm water and a little vinegar. Rinse with plenty of water (use the suitable shower if available) and dry well with a soft cloth. The side grilles must be cleaned separately and fitted back on. When cleaning is completed leave the oven door slightly open.

3.2 Semi-automatic cooking chamber cleaning

spray specific degreaser for stainless steel on the internal walls of the cooking chamber, on the side grilles, on the fan covers (do not spray onto the fans through the grille) and on the internal door glass; let the product act for about 20 minutes with closed door; switch the oven on adjusting the temperature at 70-80°C; run a cycle with maximum steam (100%) for about 15 minutes; upon completing the cycle switch off the oven, let the cooking chamber cool and rinse it with plenty of water (use the suitable shower if available); dry by running a heating cycle adjusting the temperature at 150-160°C for about 10 minutes (repeat the cycle if necessary).
When cleaning is completed leave the oven door slightly open.

Warning

Only for mod. MKF 1611 TS, MKF 1664 TS and mod. MKF 2011 TS (wheeled models) perform the semi-automatic cleaning cycle with the internal door glass in position: "glass down"

3.3 Automatic cooking chamber cleaning

From the "Home" screen () it is possible to activate automatic washing for cleaning of the oven's cooking chamber. To run one of the programs provided by the washing system, follow the instructions in paragraph 2.19, bearing in mind the following information:

- The washing system is fitted with a safety device which does not let it be turned on in the event the temperature inside the oven's cooking chamber should exceed 100°C.
- before performing a washing cycle ensure the drain is free to avoid overflowing into the cooking chamber.
- The washing programs and the frequency with which to use them depend on the type of products baked in the oven.
- To maintain adequate hygienic levels and to prevent spoiling the stainless steel of the cooking chamber, the Manufacturers recommend performing an "L3" washing cycle ("intensive washing") at least once a day.
- In the event of caked dirt forming, it must be removed and manual cleaning must be performed.
- The "P" program must be activated when first using the washing system and every time the pumps are emptied, otherwise the washing quality is impaired.

Warnings: *it is strictly forbidden to open the door of the oven during washing, danger of contact with corrosive chemicals and hot fumes!*

At the end of cleaning with the washing system, ensure there are no detergent residues inside the cooking chamber.

Any residues must be removed and the cooking chamber must be accurately rinsed.

After a black-out the washing system will automatically resume operation from the point where it was interrupted.

Before starting a cooking cycle ensure there are no detergent residues in the chamber that has just been washed. Any residues must be removed with a moist cloth suitably protecting your hands, eyes and mouth, and the cooking chamber must be thoroughly rinsed.

3.4 Extraordinary steam generator cleaning (descaling)

The innovative steam generator construction (heating element placed outside and not immersed in water), the washing and rinsing it undergoes systematically every time the oven is switched on, and the fact that it is fed with softened water (hardness between 0.5°F and 3°F), all evidently result in slowing down the formation of limescale inside it.

In any case ***THE FORMATION OF LIMESCALE CAUSES MALFUNCTIONING AND POSSIBLE FAULTS OF THE STEAM GENERATOR WHICH THE OVEN MANUFACTURER CANNOT BE HELD LIABLE FOR.*** For this reason, it is in the user's interest to descale (decalcification) the steam generator periodically, at least once a month. For practical reasons, this operation may be carried out at the end of the oven's working day (Fig. 48):

- Switch off the oven, disconnect it from the mains power supply and let it cool down completely;

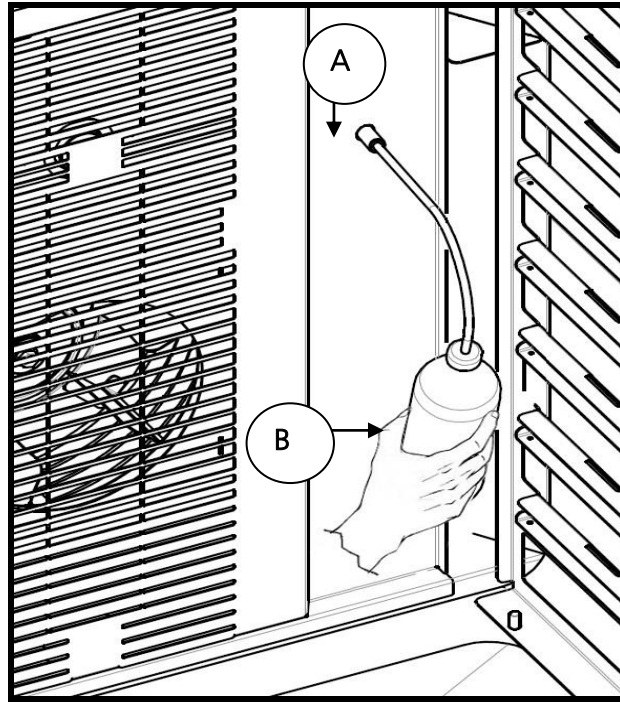


Fig. 48

- After filling bottle "B" (supplied) with descaling liquid, insert the cannula (without the "spraying" end) into the provided hole "A" on the air cover;
- Press the bottle repeatedly with one hand to insert the descaling liquid into the hole: the amount (500 ml = 0.5 litres) in a full bottle is sufficient;
- Let the descaling liquid act for at least 8-9 hours (possibly overnight);
- After the time required, reconnect the oven to the power supply.

An automatic procedure will empty the steam generator from the descaling liquid and will start a washing cycle lasting about 5 minutes.

After this procedure, the oven is ready to be used again.

Important. Food-grade vinegar is the ideal descaling liquid: it has no corrosive properties for stainless steel, has a powerful descaling action and is compatible with food.

3.5 Cleaning fans

The fans must be regularly cleaned with appropriate descaling products. All their parts must be thoroughly cleaned, eliminating any limescale. The fan cover must be removed to access fans. When cleaning is completed fit the cover back on operating in reverse order.

3.6 Door gasket cleaning

For hygienic and functional reasons it is good practice to clean the door gasket at the end of every day the oven is used. It must be accurately washed with warm soapy water. It must be rinsed and dried with a soft cloth. Any

scaling or food residue must be removed with special care, without using sharp metal tools that might irreparably damage the gasket.

3.7 Door cleaning

The internal glass of the cooking chamber door may be cleaned using the same type of degreaser used for manually cleaning the cooking chamber; otherwise, a normal (non toxic) glass cleaning product may be used. A common glass detergent may be used also to clean the external door glass. In any case one may simply use warm soapy water. After rinsing dry the glass surface well with a soft cloth.

Should opaque spots form between the two glass panes, these may be removed as they are inspectable.

3.8 Cleaning the external casing

The outer steel surfaces must be cleaned with a cloth soaked in warm soapy water or mixed with a little vinegar, they must be rinsed well and dried with a soft cloth.

Should you wish to use specific products on the market, these must comply with the cleaning requirements set out in the "General information" paragraph (paragraph 8.1).

It is worth remembering that the counter supporting the appliance, or the floor surrounding the appliance area, should also be cleaned without using acid corrosive substances (e.g. muriatic acid) since the vapours released by them might corrode and deteriorate the outer steel shell and cause irreparable damage to the electrical components inside the appliance.

3.9 Inactivity period

Should the appliance not be used for a long extent of time, it is good practice to disconnect it from the power supply (act on the safety magnetic circuit breaker located upstream of the appliance) and water supply. It is recommended to clean it with care internally (cooking chamber) and externally, paying special attention to removing any salt residues which might lead to corrosion on the steel surfaces.

It is also recommended to protect the appliance with oil-based spray products (e.g. Vaseline oil) which form an effective protective film when sprayed on the surfaces.

Leave the door of the cooking chamber ajar.

Adequately covering the appliance, finally, allows it to be protected from dust.

4 Troubleshooting

Type of fault	Cause of the fault	Corrective action
Control panel totally off (the oven does not work)	Non conforming connection to the power mains	Check connection to the mains
	Mains voltage not present	Restore power supply voltage
	Electronic board protection fuse (with microprocessor) blown	Contact a skilled technician
Cooking cycle activated: the oven does not work	Door open or ajar	Close the door properly
	Magnetic sensor damaged	Contact a skilled technician
Steam cycle activated: there is no steam production in the cooking chamber	Non conforming water mains connection	Check connection to the water mains
	Closed stopcock	Check the cock
	Obstructed water inlet filter	Clean the filter
	Damaged water inlet solenoid valve	Contact a skilled technician
	Steam generator safety thermostat activated	Contact a skilled technician
Closed door: steam escapes through the gasket	Non conforming gasket assembly	Check gasket assembly
	Damaged gasket	Contact a skilled technician
	Loosened handle "nose"	Contact a skilled technician
The oven does not cook evenly	One of the motors is locked or turns at low speed	Contact a skilled technician
	The motors do not reverse direction	Contact a skilled technician

5 Possible alarms

Identify the causes that inhibit the oven operation

Type		Description	Cause	Effect	Corrective action
E01		Temperature probe not detected	Cooking chamber probe-electronic board/microprocessor connection down	Cooking cycle cannot be started	Check and change the cooking chamber probe
			Damaged cooking chamber probe		
E02		Core probe not detected	"Core" probe-electronic board/microprocessor connection down.	Impossible to start a cooking cycle which requires setting the "core" temperature parameter	Connect the core probe to the oven, if there is still the error, check it and change it.
			Damaged (needle-shaped) "core" probe		
E03		Overheated motors safety circuit breaker tripped	Overheated motor (tripped motor thermal protection)	Oven operation disabled	Check the placement of the oven (as described at the beginning) and check the tangential motor fan
E04		Maximum oven operating temperature exceeded; tripped safety thermostat	Safety thermostat on	Oven operation disabled	Disable the safety thermostat as shown later. Check if it works properly.
E05		Display board exceeded the temperature of 75°C	Inner glass not properly closed; gasket in bad conditions	Oven operation disabled	Check if the inner glass is properly closed; check the gasket conditions; change the board if necessary
E06		Main power board S024 exceeded the temperature of 75°C	Cooling fan not working; oven too close to hot equipment or built in; oven without feet; protective film not removed	Oven operation disabled	Check all the causes; change the board if necessary
E07		Auxiliary power board S025 overtemperature exceeded the temperature of 75°C	Overtemperature above 75°C on the auxiliary power micro card	Oven operation disabled	Check all the causes; change the board if necessary

I08		Door open close the door to continue cooking	Door opening during the cooking cycle	Cooking cycle stopping	Close the oven door
I09		Door closed open the door to cool the oven	“Fast cooling” function enabled with door closed	Oven operation disabled	Open the oven door to allow “Fast cooling” of the cooking chamber
E08		Hood control board exceeded the temperature of 75°C	The hood is not electrically connected; the motor/fan is not working	Hood operation disabled	Check if the motor/fan is working properly; change the board
E09		Proofer/holding cabinet board exceeded the temperature of 75°C	Cabinet too close to the wall, not enough ventilation	Cabinet operation disabled	Move the cabinet farther from the wall; change the board if needed
E10		Poorly placed glass, move the glass upwards	Wrong position of the door glass	Oven operation disabled	Place the door glass up
E11		Poorly placed glass, move the glass downwards	Wrong position of the door glass	Oven operation disabled	Place the door glass down
E12		Main board S024 communication error	Touch board – power board S024 miscommunication error, check the data cable connection between the two boards or replace the main power board as faulty	Oven operation disabled	Contact TECNOEKA for further information
E13		Auxiliary board S025 communication error	Wrong installation of the software	Oven operation disabled	Contact TECNOEKA for a new firmware
E14		Hood board communication error	Wrong installation of the software	Oven operation disabled	Contact TECNOEKA for a new firmware
E15		Proofer board communication error	Wrong installation of the software	Oven operation disabled	Contact TECNOEKA for a new firmware
E16		Holding cabinet board communication error	Wrong installation of the software	Oven operation disabled	Contact TECNOEKA for a new firmware
E17		S024 board firmware error	Wrong installation of the software	Oven operation disabled	Contact TECNOEKA for a new firmware
E18		S025 board firmware	Wrong installation of the software	Oven operation	Contact TECNOEKA for a

E19		T011 board hood firmware error	Wrong installation of the software	Oven operation disabled	Contact TECNOEKA for a new firmware
E20		T011 board proofer firmware error	Wrong installation of the software	Oven operation disabled	Contact TECNOEKA for a new firmware
E21		T011 board holding cabinet firmware error	Wrong installation of the software	Oven operation disabled	Contact TECNOEKA for a new firmware
E22		Humidity database not detected	No database	Oven operation disabled	Reload the FW. Contact TECNOEKA for updates
E23		No Factory Recipe Book	No database	Oven operation disabled	Reload the FW. Contact TECNOEKA for updates
E24		No User Recipe Book	No database	Oven operation disabled	Reload the FW. Contact TECNOEKA for updates
E25		STOP GAS	The oven burner does not turn on, as there is no gas.	Oven operation disabled	Check the flame control device and the electrodes group
E26		T011 board gas firmware error	Wrong installation of the software	Oven operation disabled	Reload the FW. Contact TECNOEKA for updates
E27		GAS settings database not found	No database	Oven operation disabled	Reload the FW. Contact TECNOEKA for updates
E28		Blower not active	The oven burner does not turn on due to a failure on the electrical winding/mechanical block of the "blower".	Oven operation disabled	Check the connections to the blower
E29		Check the exhaust valve lever position	Valve lever in the wrong position	Water in the tank/grease in the drain	Move the lever according to the program (cooking or washing)
E30		Hood not electrically connected	Hood unplugged	The hood doesn't work, it can be damaged	Connect the hood to the electrical socket

6 Possible errors

Communicate information on the abnormal operation of the oven without disabling it

	Type of error	Cause of the error	Effect	Corrective action
	 Blackout the oven is off from xx:xx to yy:yy	Power supply outage	The display shows the type of error. The oven continues working	The oven automatically resumes operation from the point where the cooking cycle was interrupted
W01	 Display card overtemperature exceeded the temperature of 60°C	Overtemperature above 60°C on the display card	The display shows the type of error. The oven continues working	Contact a skilled technician
W02	 Main power micro card overtemperature exceeded the temperature of 60°C	Overtemperature above 60°C on the main power micro card	The display shows the type of error. The oven continues working	Contact a skilled technician
W03	 Auxiliary power micro card overtemperature exceeded the temperature of 60°C	Overtemperature above 60°C on the auxiliary power micro card	The display shows the type of error. The oven continues working	Contact a skilled technician
W06	 Humidification malfunction cannot reach the desired humidity.	Insufficient humidity in the cooking chamber	The display shows the type of error. The oven continues working	Contact a skilled technician
W07	 Dryer malfunction cannot reach the desired humidity.	Excessive humidity in the cooking chamber	The display shows the type of error. The oven continues working	Contact a skilled technician

W08	 Wash oven excessive number of cooking cycles executed without washing the oven	Too many cooking cycles executed without washing	The display shows the type of error. The oven continues working	Activate multiple washing cycles in "Intensive" mode (L3)
W09	 Faulty heating elements	Excessive time taken to reach the required temperature	The display shows the type of error. The oven continues working without heating the cooking chamber	Contact a skilled technician

7. Technical support

Before leaving the factory this appliance has been calibrated and tested by experienced and skilled personnel in order to obtain the best operation results. Any repair or calibration must be carried out with the utmost care and attention, solely using original parts.

That is why it is required to always contact the Dealer who has sold the appliance or our nearest Technical Support Centre, specifying the kind of failure and the model of the appliance you have. The parts required for adaptation to different types of gas are provided with the appliance hence supplied upon sale or delivery.

For servicing needs the user may contact Tecnoeka on the numbers shown on the cover, or refer to the website www.tecnoeka.com.

8. Disposal of the appliance

In accordance with Directive 2012/19/EU on the disposal of waste electrical and electronic equipment, the crossed-out wheeled bin symbol on the equipment indicates that the product was placed on the market after 13 August 2015, and that at the end of its services life it must be disposed of separately from other waste.

At the end of the appliance's service life, the user must, therefore, deliver it to the appropriate centres (recycling centres) for the separate collection of electrical and electronic waste.

All TECNOEKA appliances are made of recyclable metal materials (stainless steel, galvanised sheet metal, iron, copper, aluminium, etc.) which make up more than 90% of the total weight of the appliance. Before disposing of the appliance, it is recommended to make it unusable by removing the power supply cable and removing the mechanism for closing compartments and/or openings, if any.

The separate waste collection and subsequent treatment, recovery and disposal, are conducive to the production of equipment with recycled materials and reduce the negative effects on the environment and health possibly caused by incorrect waste handling. Illegal disposal of the product by the user entails the application of administrative penalties.



9. Conventional warranty

The Tecnoeka product is designed for food use only and is covered by warranty according to law (art. 1490 and subsequent c.c.) for Professional Customers, or customers who purchase from the Dealer with VAT number. The Tecnoeka product is professional and certified according to IEC EN 60335-1 and can only be sold to professional users.

With the exclusion of any additional warranty, the Vendor undertakes to repair, at their sole discretion, only those parts of their products that prove tainted by an original fault as long as, subject to forfeiture, the customer has reported the fault within 12 months from purchase and reported the defect within 8 days from the date when it was found, in writing, attaching copy of the invoice, of the receipt or tax receipt proving the purchase.

Including the event in which the customer is unable to produce the invoice, receipt or tax receipt proof of purchase or the terms outlined above are not complied with, the warranty is expressly forfeited in the following cases:

- 1) Faults or breakdowns of components caused by transport.
- 2) Damage deriving from inadequate electrical, hydraulic and gas supply systems compared to that provided in the installation manual, or anomalous operation of the same.
- 3) Damage deriving from the incorrect product installation, or installation not in accordance with the installation manual and, in particular, damage due to inadequacy of the flues and drains to which the product itself is connected.
- 4) Use of the product for purposes other than its intended use, as specified and resulting from the technical documentation issued by Tecnoeka.
- 5) Damage due to the use of the Product not in accordance with the instructions in the use and maintenance manual.
- 6) Tampering with the product.
- 7) Product adjustment, maintenance and repair interventions carried out by unqualified personnel.
- 8) Use of non-original spare parts or not authorised by Tecnoeka.
- 9) Damage or defects caused by negligent and/or imprudent use of the product, or in contrast with the instructions prescribed by the use and maintenance manual.
- 10) Damage caused by fire or other natural events and, in any case, by fortuitous events or any other cause beyond the manufacturer's control.
- 11) Damage to components subject to normal wear that require to be periodically replaced.

Also excluded from the warranty: painted or enamelled parts, knobs, handles, mobile or removal plastic parts, light bulbs, glass parts, gaskets, electronic parts and any accessory parts and transport from the consumers, final user and/or purchases location to Tecnoeka srl and vice versa. Replacement costs of the oven and relative installation expenses are also excluded from the warranty. The warranty does not cover the Products purchased as used or from third parties, not connected or authorised by Tecnoeka.

TECNOEKA SRL shall not be liable for damage, either direct or indirect, caused by product fault or ensuing from forced discontinuation of its use.

Repairs under warranty do not result in extension or renewal of the same.

The components replaced under warranty are, in turn, covered by 6-month warranty from shipment date, certified by the transport document issued by Tecnoeka.

No one is authorised to change the warranty terms and conditions or to issue others, either verbal or written.

10. Availability and supply of spare parts

Tecnoeka srl keeps and ensures the availability of spare parts for a maximum of 24 months from the date of the sales invoice of the finished product to the dealer. Availability cannot be guaranteed after said period.

11. Applicable law and competent Court

Supply relationships will be governed by Italian law, with the express exclusion of the private international law standards and the Vienna Convention on the International Sale of Movable Goods of 11.4.1980. Any dispute will be settled exclusively by the Court of Padua.

The products presented in the manual may be subject, without prior notice and responsibility for Tecnoeka Srl, to technical and design changes to improve the same without affecting their essential features of functionality and safety. Tecnoeka Srl shall not be liable for any inaccuracy due to printing or clerical errors in the presentation instruments and technical and commercial description of its products to customers.



Tecnoeka srl

via Marco Polo, 11 - 35010 Borgoricco, Padova - Italy
Tel. +39.049.5791479 - Tel. +39.049.9300344

email

info@tecnoeka.com - tecnoekasrl@pec.it

web site

tecnoeka.com